



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for INDOOR applications.
- DO NOT INSTALL INSULATION WITHIN 3.0" (76 mm) OF ANY PART OF THE LUMINAIRE.



Electrical Connections:

- LED lights must be **connected in series** respecting polarities.
- **CHOOSE POWER SUPPLY ACCORDINGLY.** Please consider the voltage through which fixtures are fed as well as the max power consumption.
- **Connect power only if all fixtures are connected.**
- The power supplies **MUST** be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- The electronic power supply is current-stable, therefore it partially compensates the voltage-drop problems related to the cable length; we suggest not to exceed 100 ft.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

MOOR 5 LARGE

Fixture Installation (In a Gypsum Wall With Optional Plasterkit)

installation instructions

Moor 1/2/3/	- 8.82"x15.71"
Moor 4/5	- 8.82"x17.48"
Moor 6/7/8	- 8.82"x19.65"
Moor Large 1/2/3/	- 8.82"x21.42"
Moor Large 4/5	- 8.82"x22.80"

dry time: 4 h

dry time: 12 h

dry time: 12 h

Use joint filler to fill in joints

Use woven tape

Fix the tape with joint filler

Smooth

Use sponge to remove joint filler from fitting

Use joint finisher as a final layer

Use fine sanding paper in case of flat fittings

In case of curved surface use fine 3M sponge







If you prime the plaster for the first time dilute the paint about 15%

If you prime the plaster for the second time, we recommend to dilute the paint about 5%

MOOR 5 LARGE

Fixture Installation (In a Solid Wall)

installation instructions

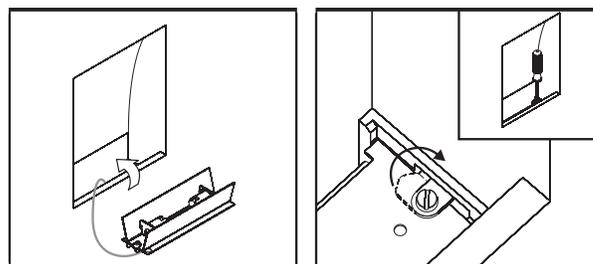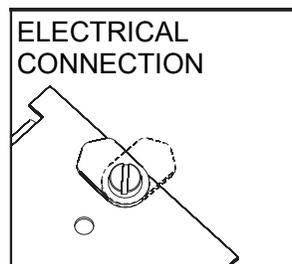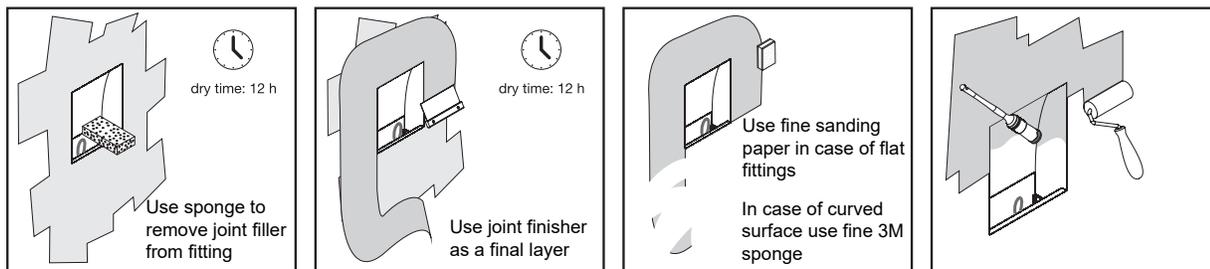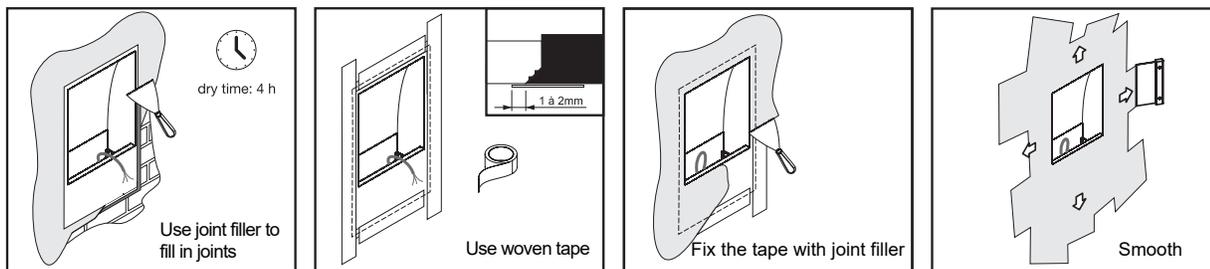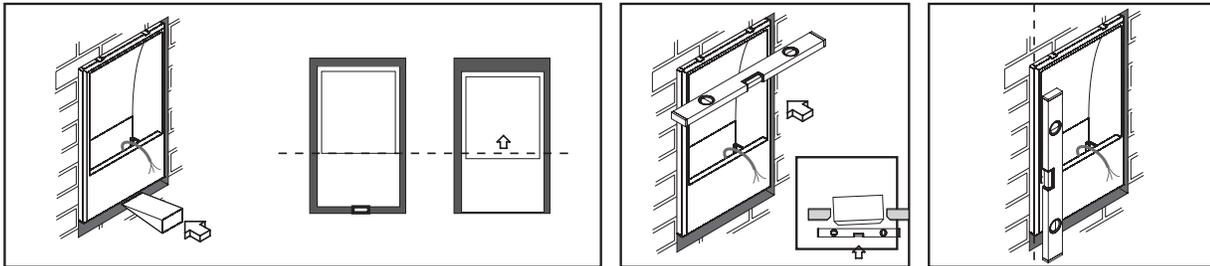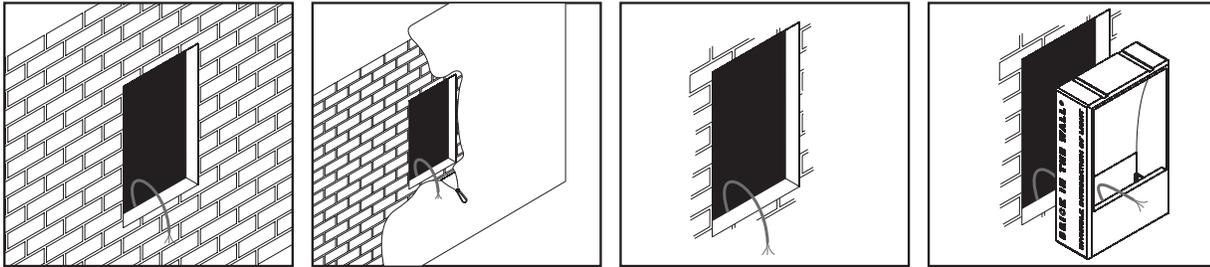

If you prime the plaster for the first time dilute the paint about 15%

If you prime the plaster for the second time, we recommend to dilute the paint about 5%

Moor 1/2/3/	- 8.82"x15.71"
Moor 4/5	- 8.82"x17.48"
Moor 6/7/8	- 8.82"x19.65"
Moor Large 1/2/3/	- 8.82"x21.42"
Moor Large 4/5	- 8.82"x22.80"

350mA DC from remote driver

- It is the contractor's responsibility to install Remote Driver in a suitable electrical enclosure!!!

