

Remote 120-277VAC



 
installation instructions




INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE **INSTALLATION!** Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.



 - The main power connection must be in accordance with local electrical codes.
- Suitable for INDOOR applications.
- DO NOT INSTALL INSULATION WITHIN 3.0" (76 mm) OF ANY PART OF THE LUMINAIRE.





Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.






Fixture Installation

installation instructions

- Øã¢č ¦^Á^ĭ ã^•Á^{ [c^Ápower supply (] ¦[çãå^å)È
- QÁS Ácontractor'sÁ^•][}• ãa đãc Ás install driver in suitable electrical enclosure.
- $OF[A'] \land 8d = 8a + 68[$ } $\land 8d = 9 \land 8d = 9 \land 6d = 9$
- Wh^A, [*] ca, *Ac^{] | aec^A, f, ca, Ac@A, ab, ac@A, ab, ac@A, a
- V¸ [Á&¦^¸ •Áæ;^Á; Áà^Á •^åÁ; Á; [ˇ] oÁ æ&@, Áæ, Æ; Æ; ^æ Á; @, } DÁ; Áœ æ;] ![] !ãæ; ^
] |æ&^•È
- Ö¦āļÁ@; |^• Áş Ás@ Ás\āj * Áse Á, ^¦Ás@ Ás\{] |æs\Áse) åÁ; [` } cÁs@ Ás; æs\ ^o Á āj * Ás@ Ás\^, •
 Ç; |Çãã\åÁs\Â; c@; DÁ; Ás@ Ás\ājā; * ÈDetermine hole size by size of support screw used.
- Ù^&` |^Ás@ Áã¢č |^Áş q Á |æ&^Ás) •` |^Ás@æÁs) |Á¸ Ás@ Ás| æ&\^o Á |ãå^Ás@[`* @Ás@ æ;] |[] | ãææ^ÁNÁ @æ; ^å Ás| æ&\^o È

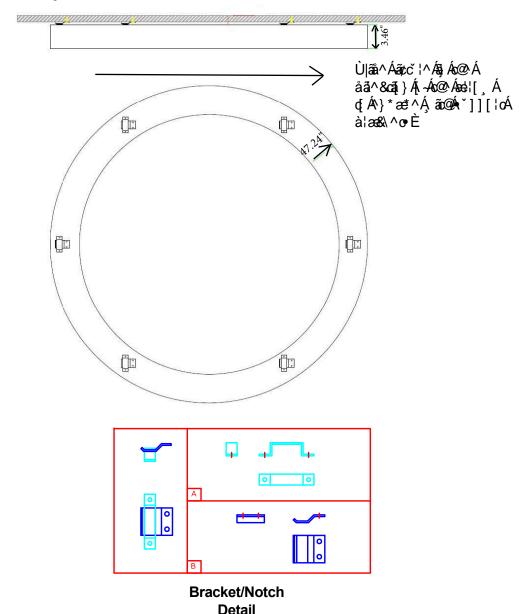

P: 908-996-7710

F: 908-996-7042



designplan@

Mounting Pattern

installation instructions

