### TECH MINI STEEL ROUND 01 / 02



5W, 2 x 5W, INTEGRAL 120VAC

installation instructions



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

# DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards.
   Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.







**IP65 IK08** 

**ATTENTION:** <u>For Wall/Ceiling</u> - It is the contractor's responsibility to caulk around all the edges between the fixture and the mounting surface to satisfy wet label requirements.

Contractor **MUST** use gel-filled wire nuts.

#### Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

P: 908-996-7710 F: 908-996-7042


## TECH MINI STEEL ROUND 01 / 02



5W, 2 x 5W, INTEGRAL 120VAC

installation instructions

### **FIXTURE DIMENSIONS:**

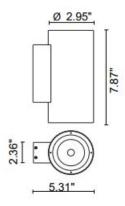

### FIXTURE INSTALLATION

- SWITCH-OFF THE POWER SUPPLY BEFORE CARRYING OUT ANY MAINTENANCE OPERATION.
- -1 Remove the fixing plate by unscrewing the two screws using the tool included in the package
- -2 Prepare holes in the wall using plugs type fisher (included in the package) in correspondence to the feeding point
- -3 Place the fixing plate to the wall by tighten the fixing plugs screws
- -4 Make the electrical connection to the terminal
- -5 Place the luminance by tighten two fixing screws using the tool included in the package

