

Remote 250mA installation instructions



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

## DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.





#### **Electrical Connections:**

- LED lights must be connected in series respecting polarities.
- CHOOSE POWER SUPPLY ACCORDINGLY. Please consider the voltage through which fixtures are fed as well as the max power consumption.
- Connect power only if all fixtures are connected.
- The power supplies MUST be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- The electronic power supply is current-stable, therefore it partially compensates the voltage-drop problems related to the cable length; we suggest not to exceed 100 ft.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

# ATTENTION: It is the contractor's responsibility to properly install the fixture base on mounting surface without blocking designated weep holes! DO NOT CAULK AROUND THE FIXTURE COVER!

### **Maintenance**

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs
  of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the
  device.
- In the case of damage, the components must be replaced by original components or spare parts.

F: 908-996-7042

P: 908-996-7710

## **WINDOW WAVE 2.0**




installation instructions


## **Fixture Installation**


- Prepare holes in correspondence of the feeding point and fix the base using two plugs not included in the package pic. 1
- Loose the grub-screw in the base and remove the cover pic.2
- Make an adequate electrical connection and fix the base pic 3
- Close the luminaire by tighten the grub-screw using the tool included in the package pic. 4
- Cable can also pulled out from the side

#### DO NOT CAULK AROUND THE FIXTURE COVER!

Use gel-filled waterproof wire-nuts for wire connections. (IF APPLICABLE)

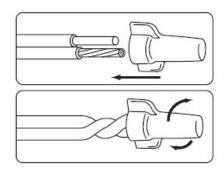


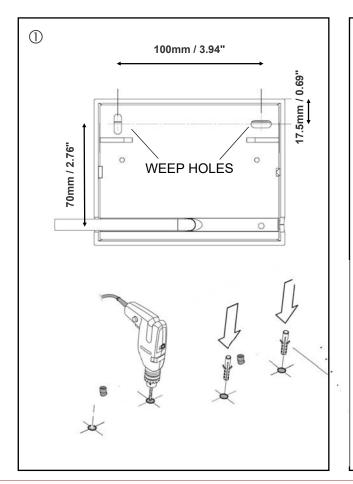


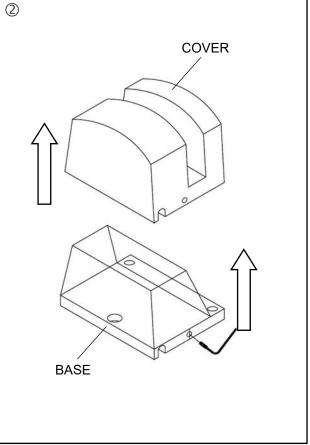




installation instructions

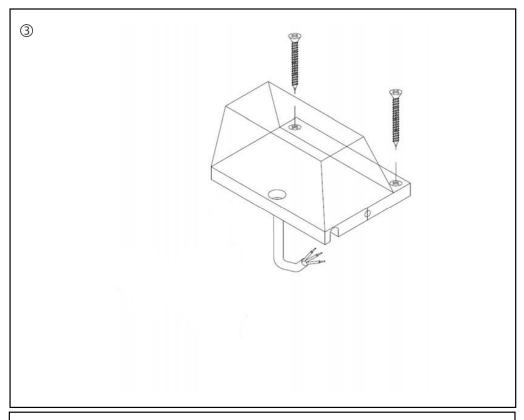

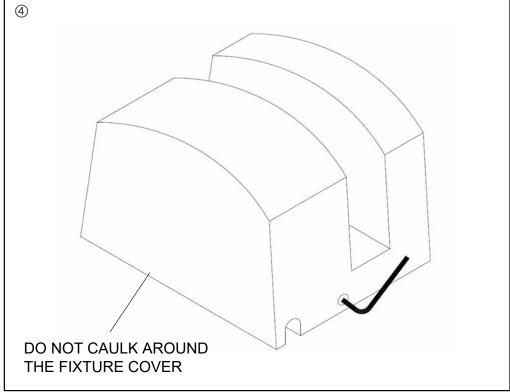


## **WINDOW WAVE 2.0**

installation instructions

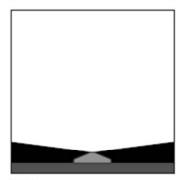


170°

SINGLE INSTALLATION, IN THE MIDDLE: SUGGESTED FOR SMALL / MEDIUM SIZE WINDOWS

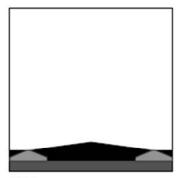

170°

DOUBLE INSTALLATION, ON BOTH SIDES: SUGGESTED IN CASE OF HIGH LIGHTING PERFORMANCE NEEDED

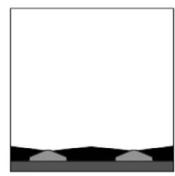

170°

DOUBLE INSTALLATION, IN THE MIDDLE: SUGGESTED FOR BIG SIZE WINDOWS




SIDE KNOCKOUT FOR CABLE



installation instructions

## **Wiring Diagram**

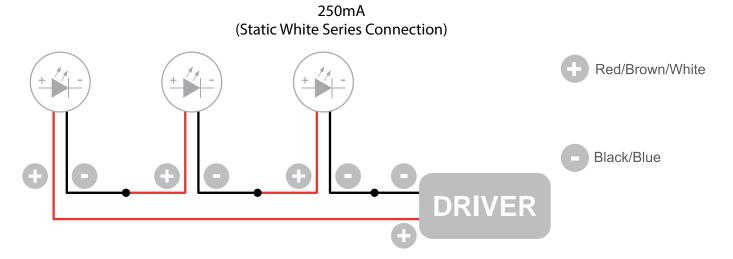

<u>^</u>

The individual lamps must be connected in series.

Only power up the system once all the lamps have been connected.

- LED lights work at constant current. When choosing a power supply unit, you need to consider the current by which the LEDs are driven and their maximum power consumption.
- Only power up the system once all the lamps are connected. Connecting an individual lamp to an active power supply may cause the lamp to break due to over-voltage.
- The electronic power supply is constant current, so to a certain extent it automatically compensates the voltage drop associated with cable length; however, we advise not exceeding 100 feet.
- Lamps and power supply units must be installed in well-ventilated boxes or locations to allow a natural heat diffusion and avoid the devices overheating.
- On the power system, install a surge protection device to reduce the intensity of any voltage spikes to protect the lighting fixtures from the risk of damage.
- Fixture NOT suitable for covering with thermally insulating material.

P: 908-996-7710 F: 908-996-7042