installation instructions



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for INDOOR applications.
- DO NOT INSTALL INSULATION WITHIN 3.0" (76 mm) OF ANY PART OF THE LUMINAIRE.





IP20

Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:


- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

P: 908-996-7710 F: 908-996-7042



designplan@

FIXTURE DEMENSION:

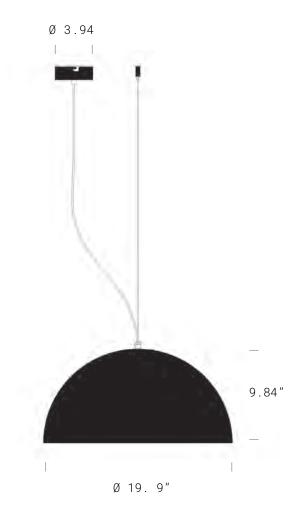

MAX 100W, 120VAC



installation instructions

ASSEMBLY INSTRUCTION

switch off the mains supply before starting the installation



1. fix the cable clamp holder to the ceiling



2. thread one end of the steel cable and screw the cable clamp into its holder




3. tighten the cable clamp screw to the desidered height



4. get off the bracket and fix it to the ceiling



5. do the wiring powerng with 120V, connect the yellow/green ground wire

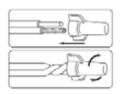

Use gel-filled waterproof wire-nuts for wire connections.



• It is the contractor's responsibility to install Remote Driver in a suitable electrical enclosure.

6. tighten the structure to the bracket

7. switch on the main supply