



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.



IP65 IK05

Electrical Connections:

- LED lights must be **connected in parallel** respecting polarities.
- **CHOOSE POWER SUPPLY ACCORDINGLY.** Please consider the voltage through which fixtures are fed as well as the max power consumption.
- **Connect power only if all the fixtures are connected.**
- The power supplies **MUST** be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

ATTENTION: For Wall/Ceiling - It is the contractor's responsibility to caulk around all the edges between the fixture and the mounting surface to satisfy wet label requirements.








For In-Grade - It is the contractor's responsibility to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection. Contractor **MUST** use gel-filled wire nuts.

Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.





Dimension:

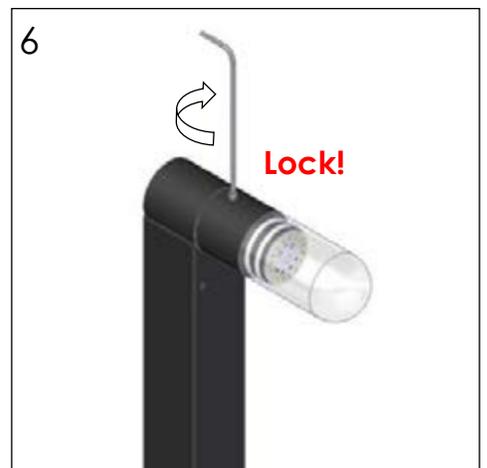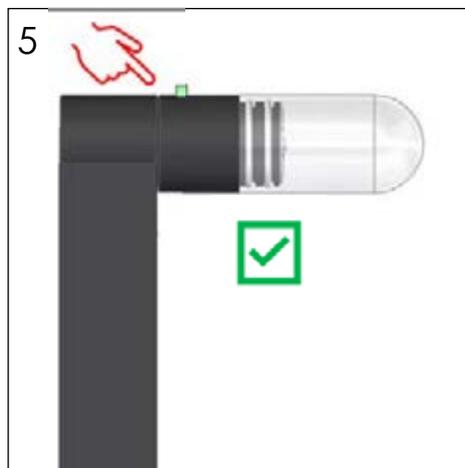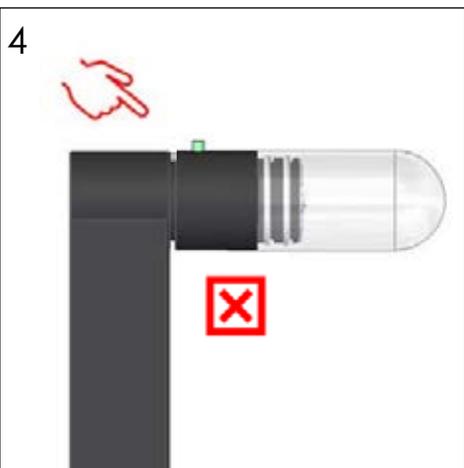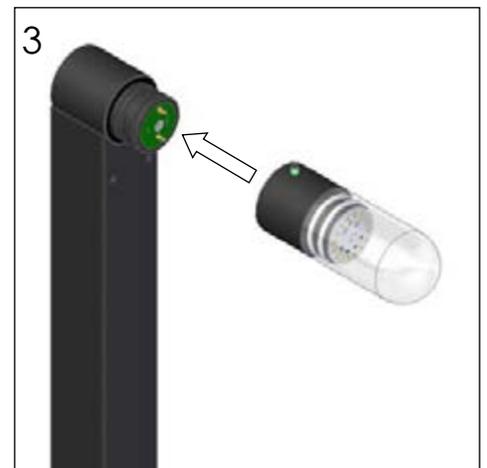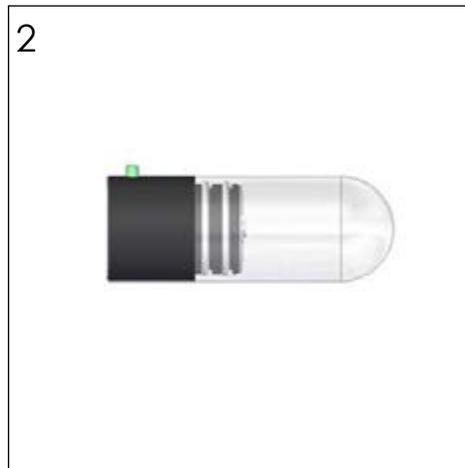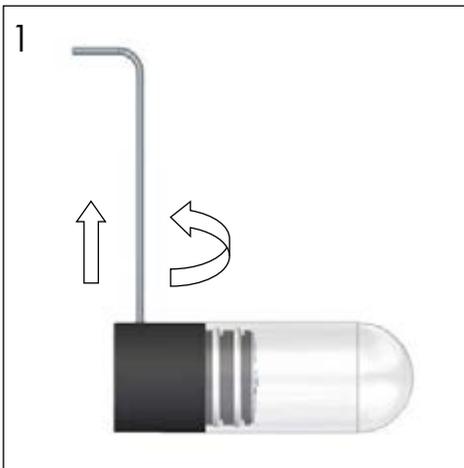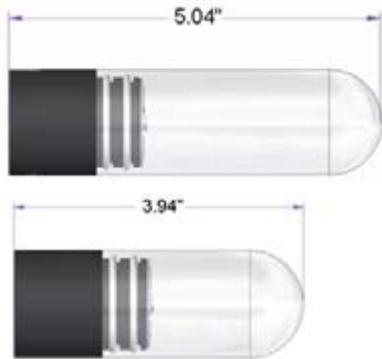


- Unscrew with the special provided wrench.
- Insert the body of the lamp into the connector, making sure that the plastic washer is perfectly positioned.
- Make the desired positioning and lock with the appropriate screw.

Bollard Accessory Installation




Mounting distance:

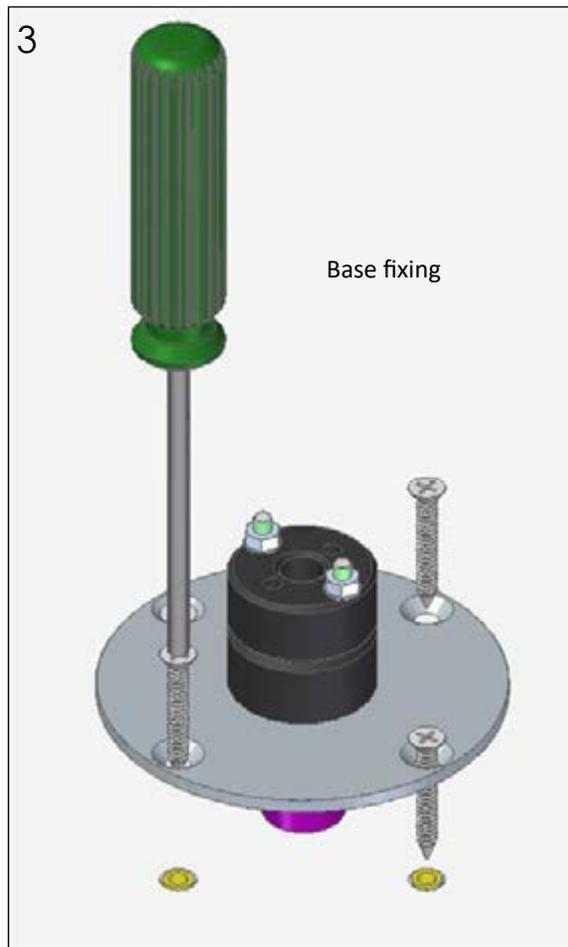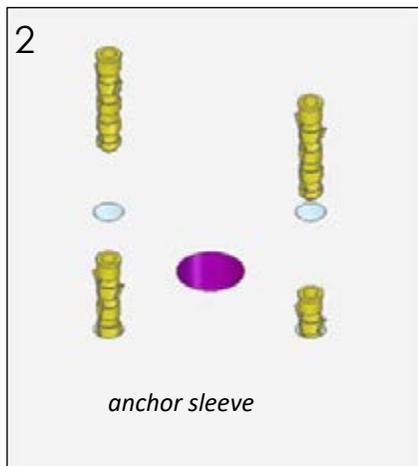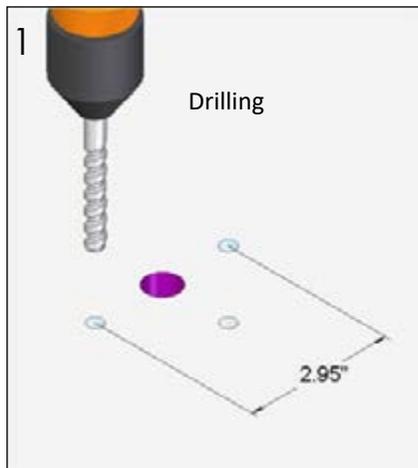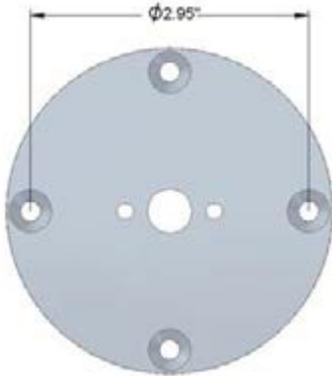


Bollard Accessory Installation

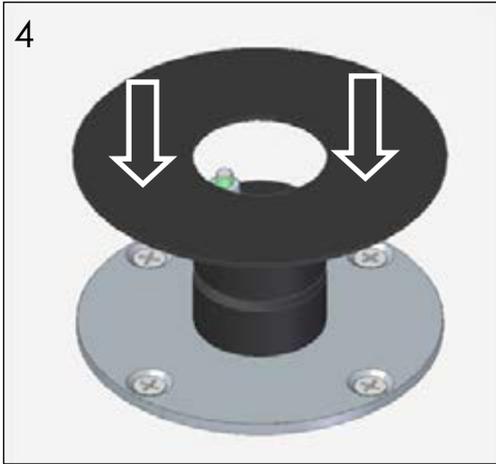



install base cover

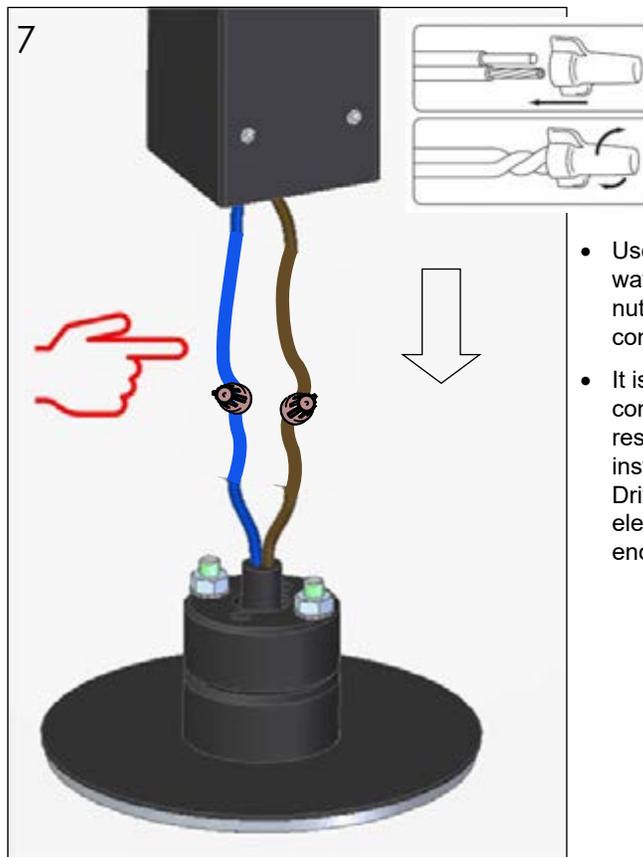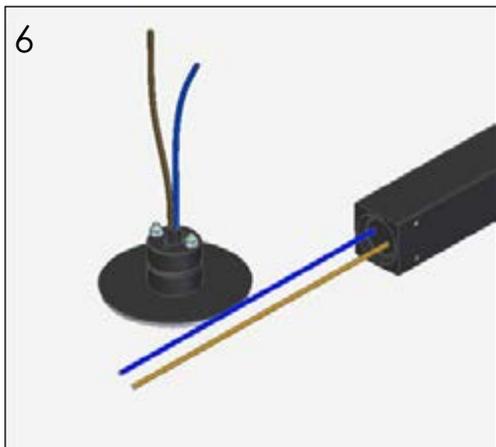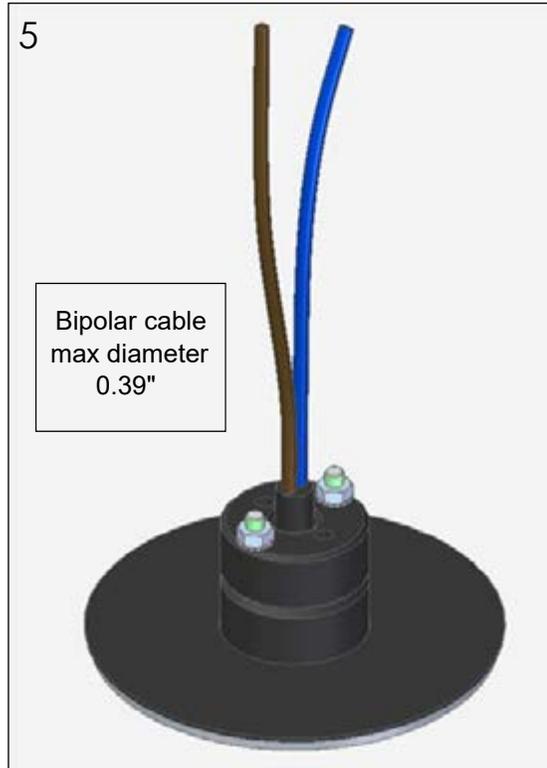

- Use gel-filled waterproof wire-nuts for wire connections.
- It is the contractor's responsibility to install Remote Driver in a suitable electrical enclosure.

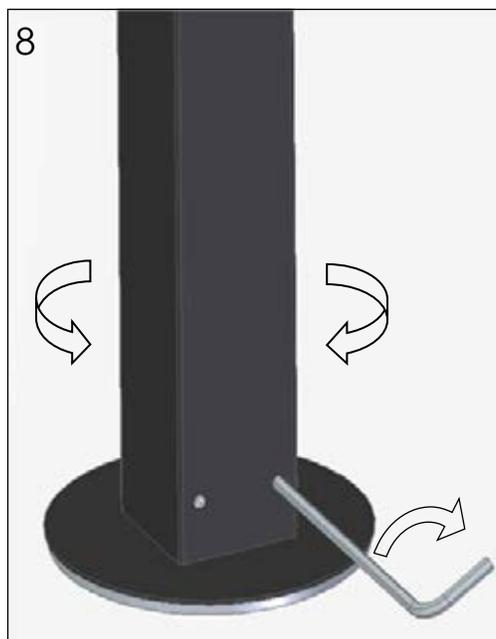


Bollard Accessory Installation



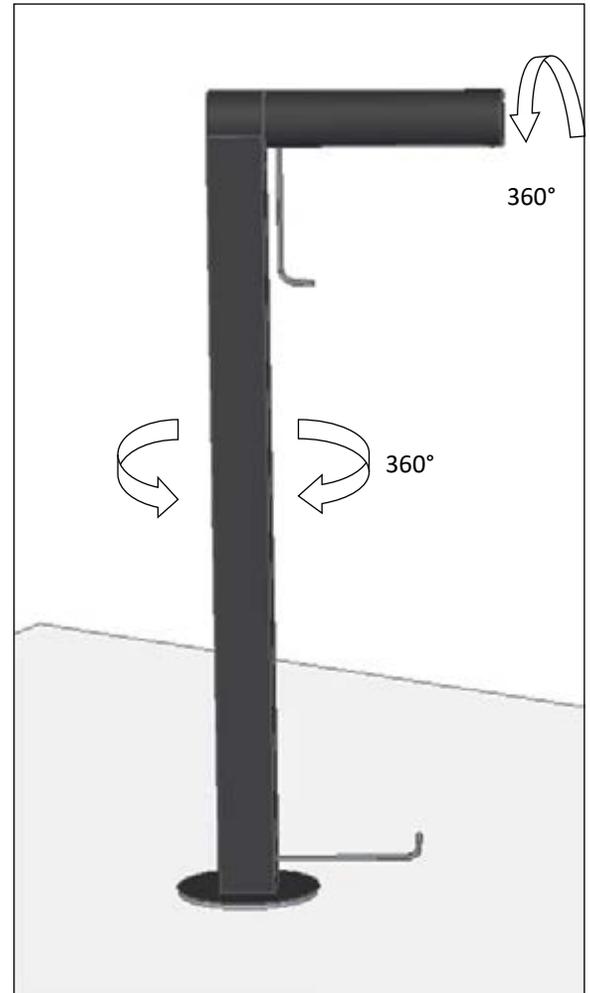
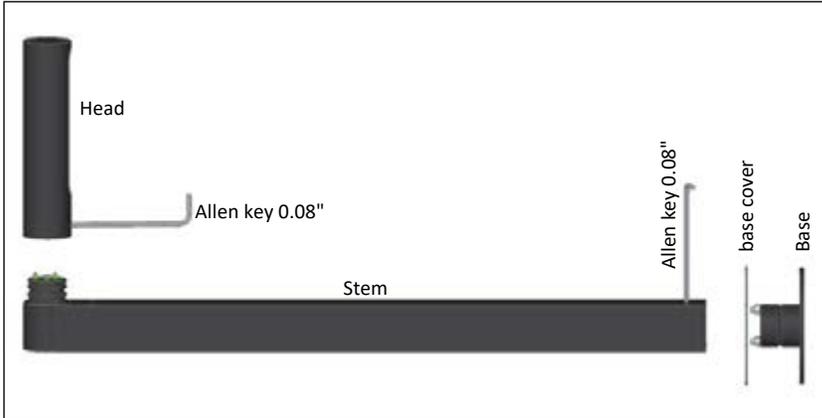


Wall Support Accessory Installation


Dimensions:

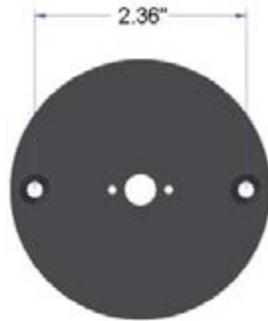

Ground/Wall/Ceiling
Mounting:

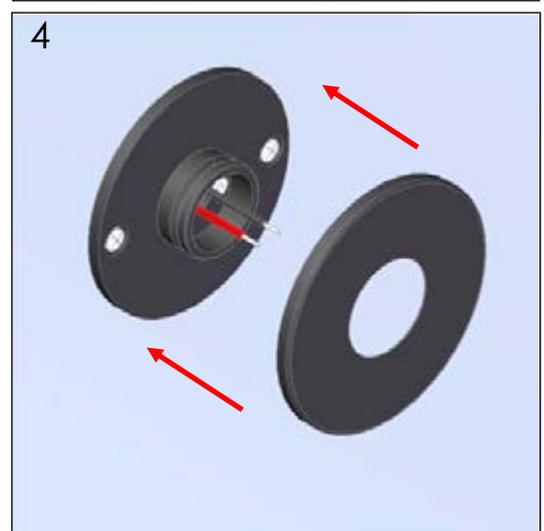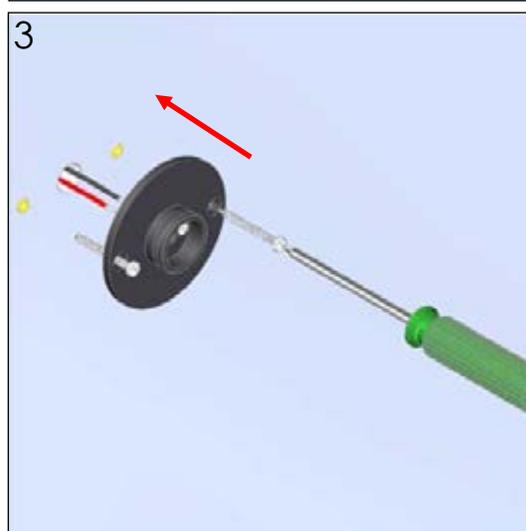
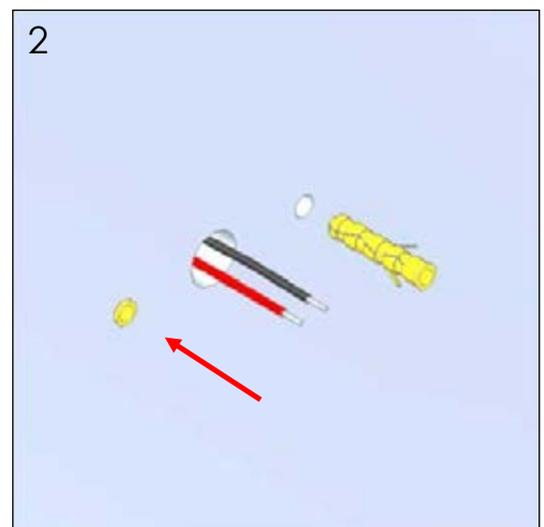
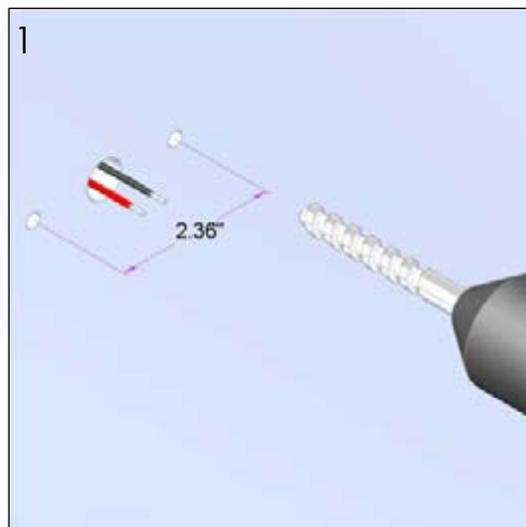


Wall Support Accessory Installation

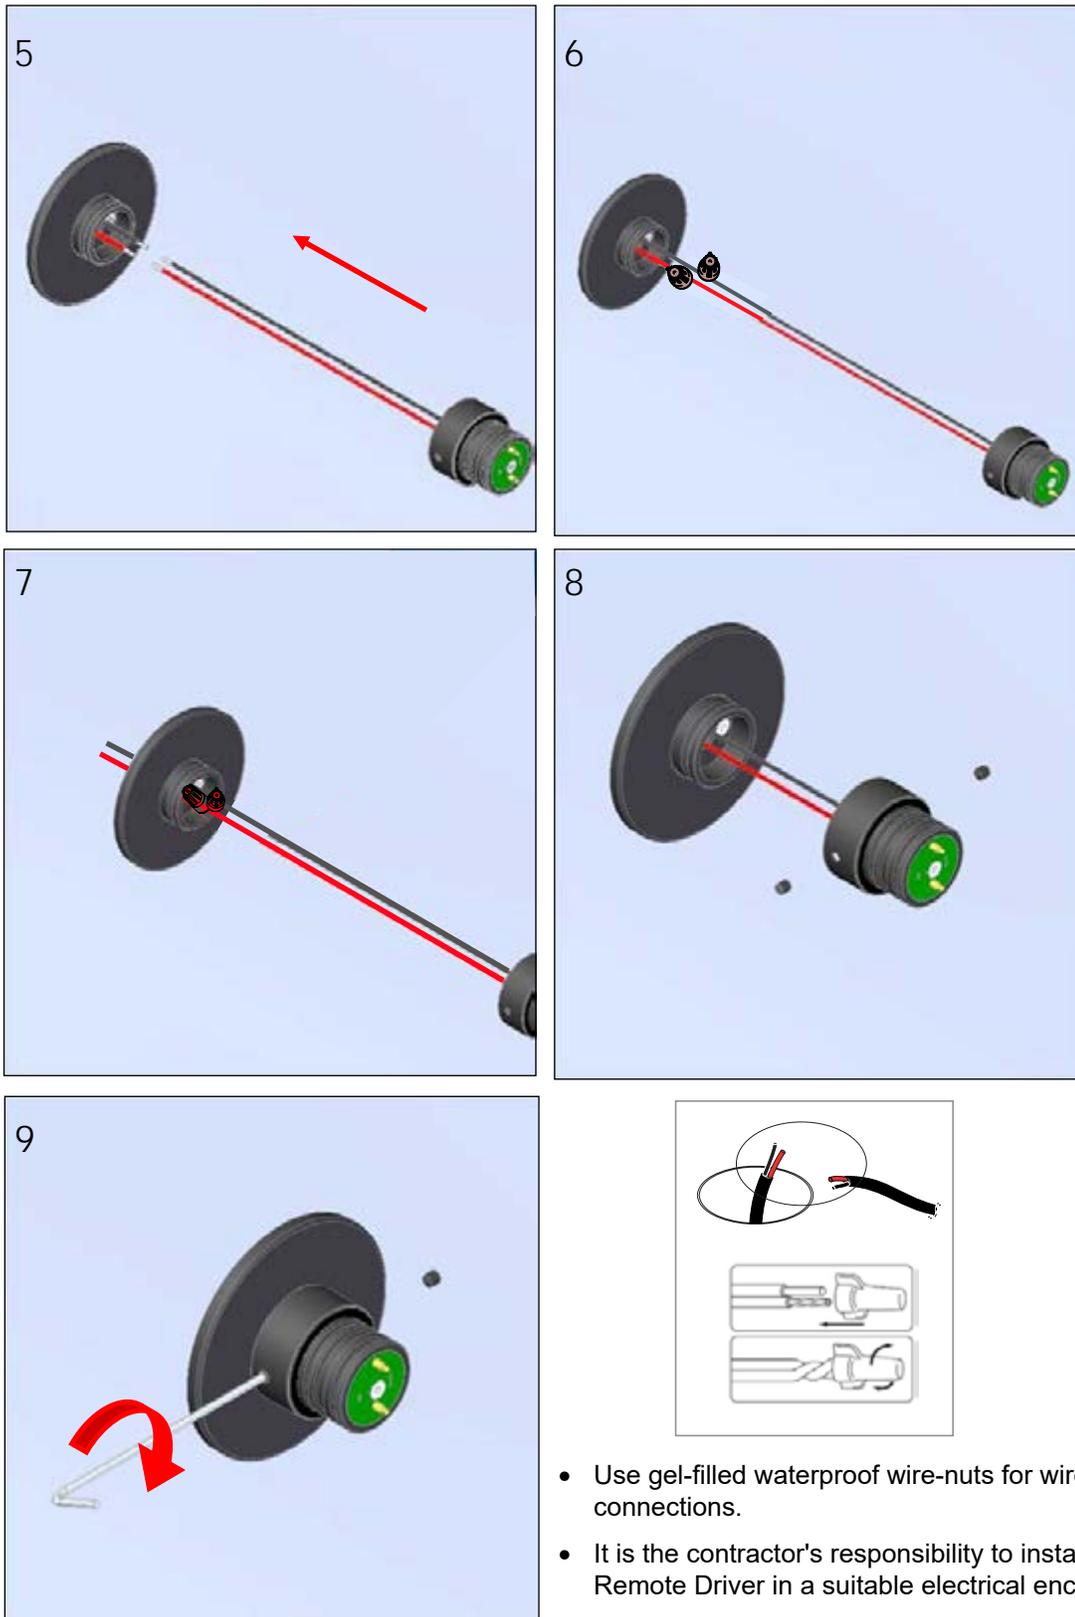



Wall Support Accessory Installation

Wall base + Stilla

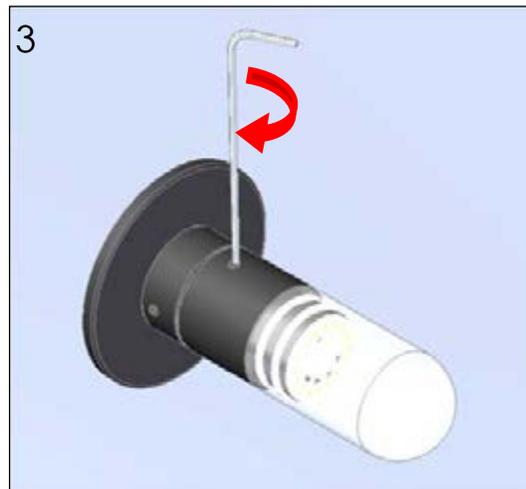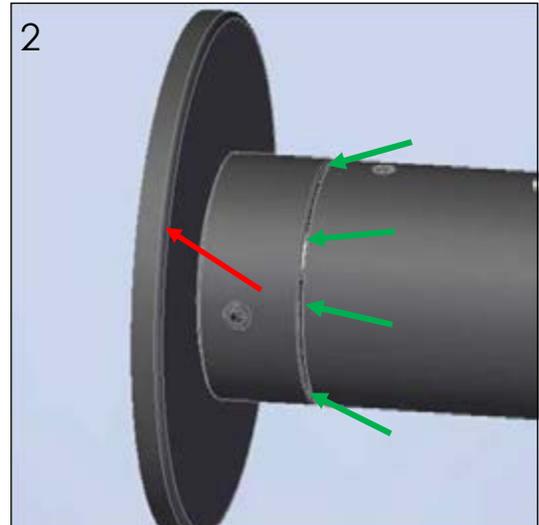
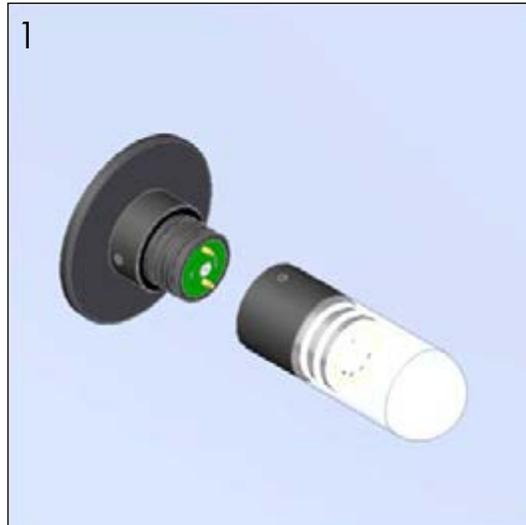


Deco Stem Accessory Installation




Mounting distance:

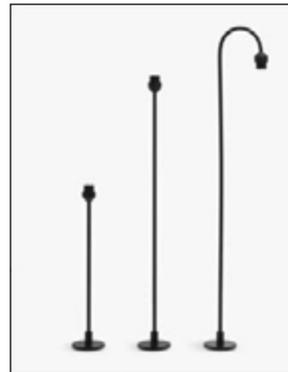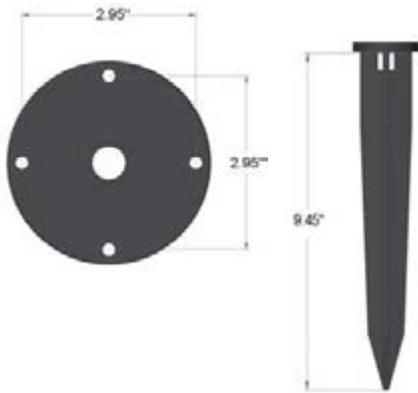


Mounting:

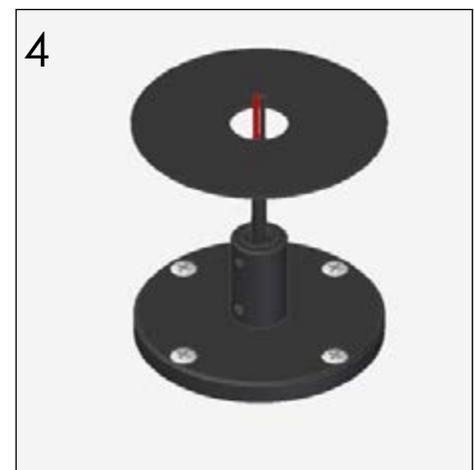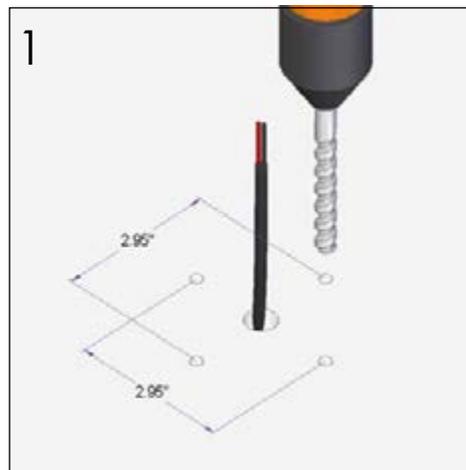

Deco Stem Accessory Installation

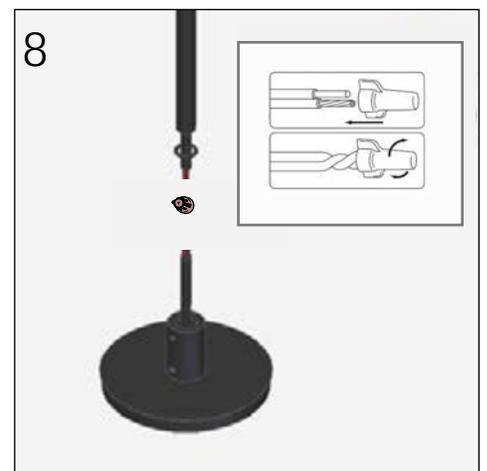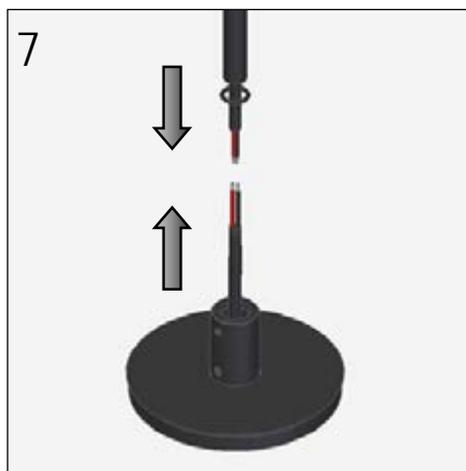
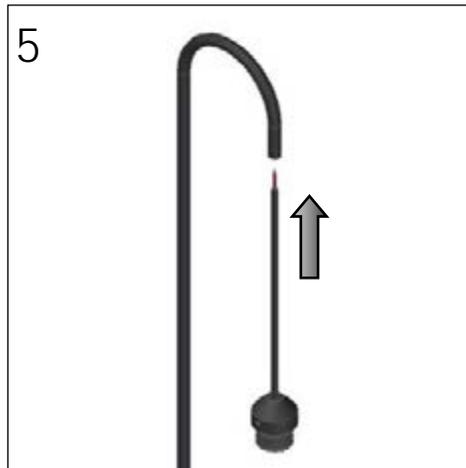


See connections kit manual 12500028:


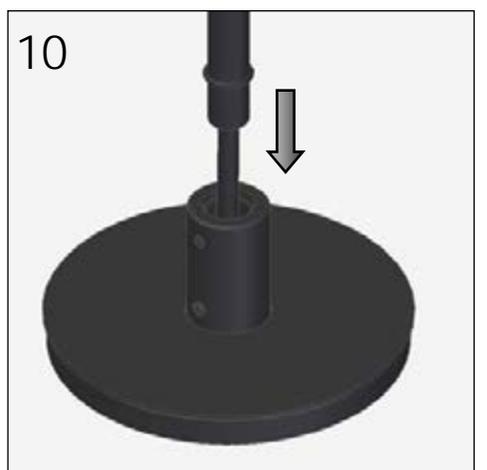


- Use gel-filled waterproof wire-nuts for wire connections.
- It is the contractor's responsibility to install Remote Driver in a suitable electrical enclosure.

Deco Stem Accessory Installation

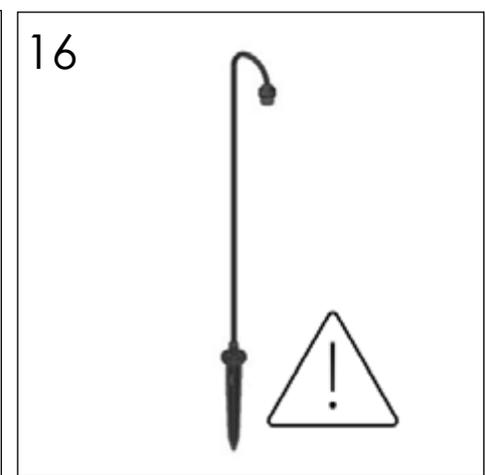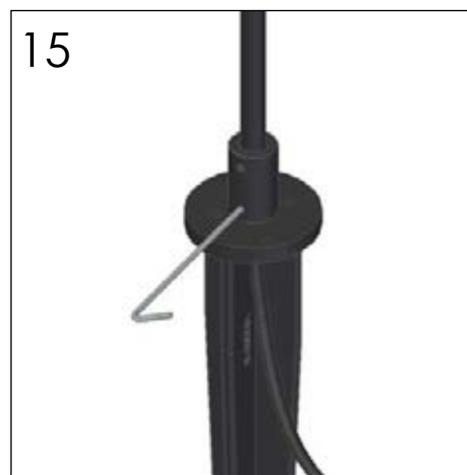







Fix spike in wet soil:






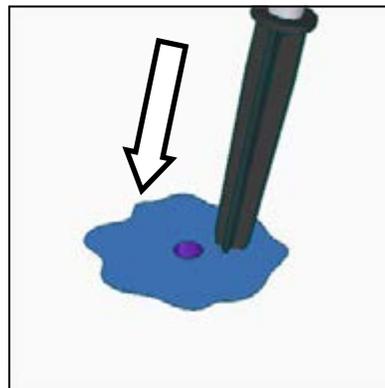
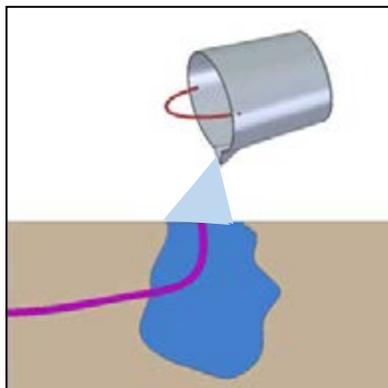


Funis Accessory Installation

installation instructions

Dimension:

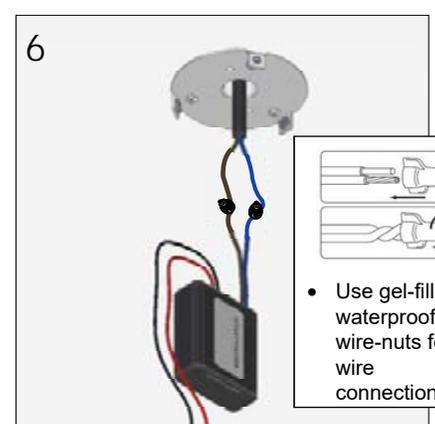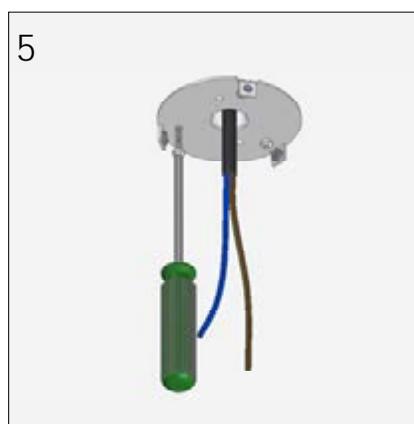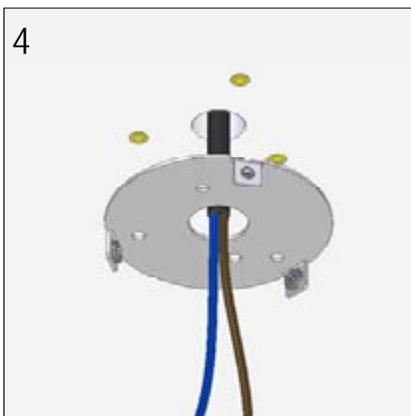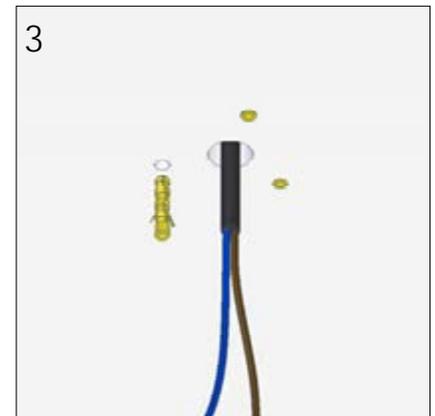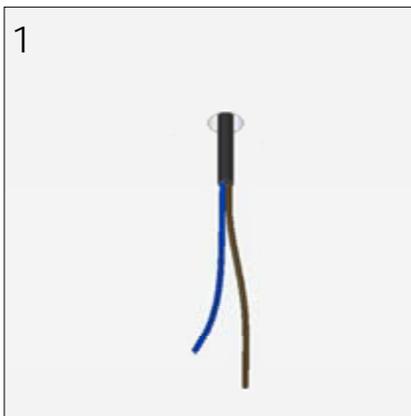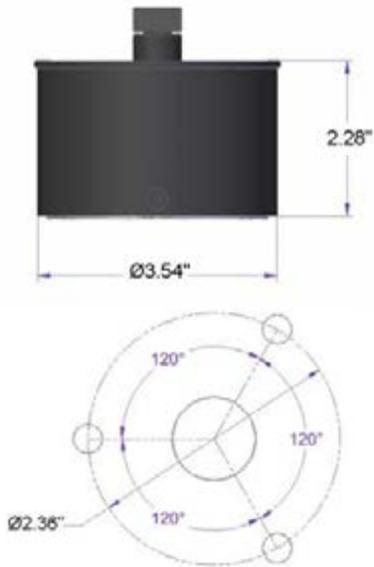


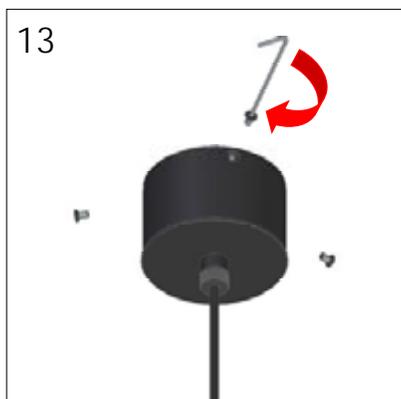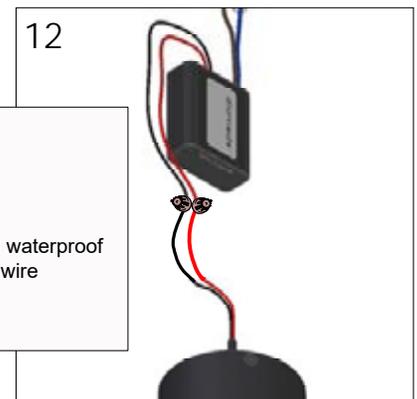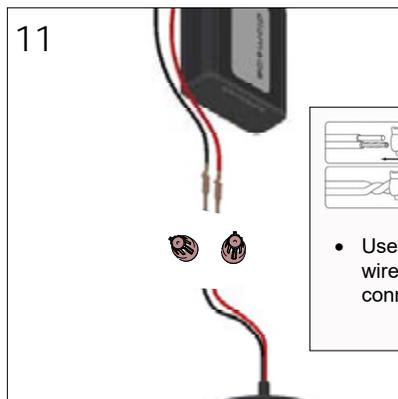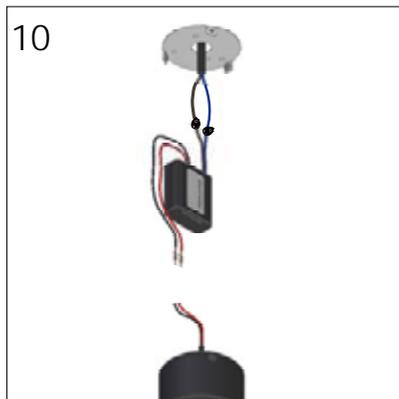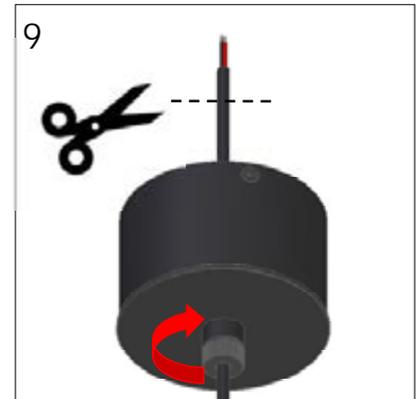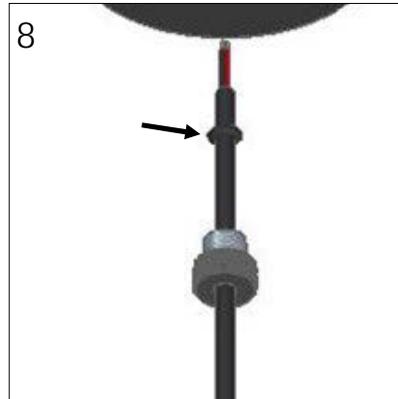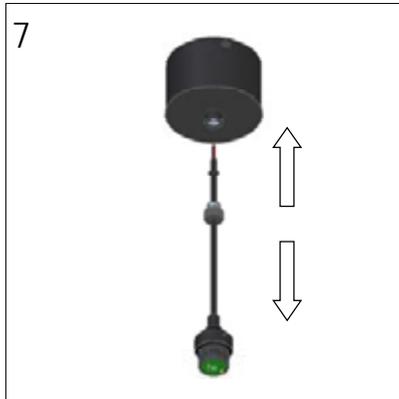


- It is the contractor's responsibility to install Remote Driver in a suitable electrical enclosure.

Deformable Mini Pole Accessory Installation

What's in the box:

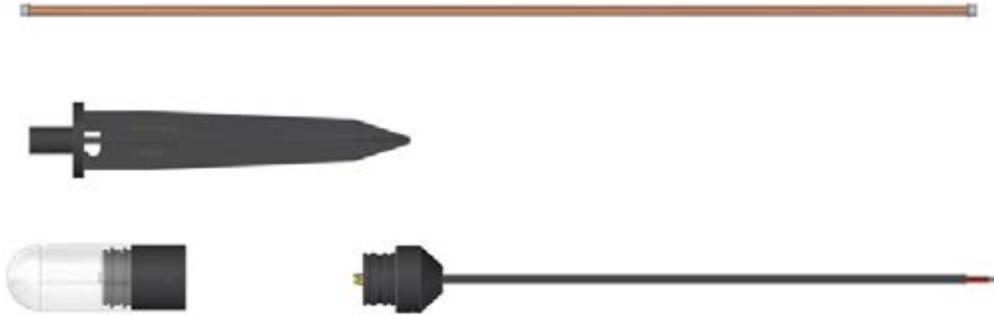


Tube cutting and bending

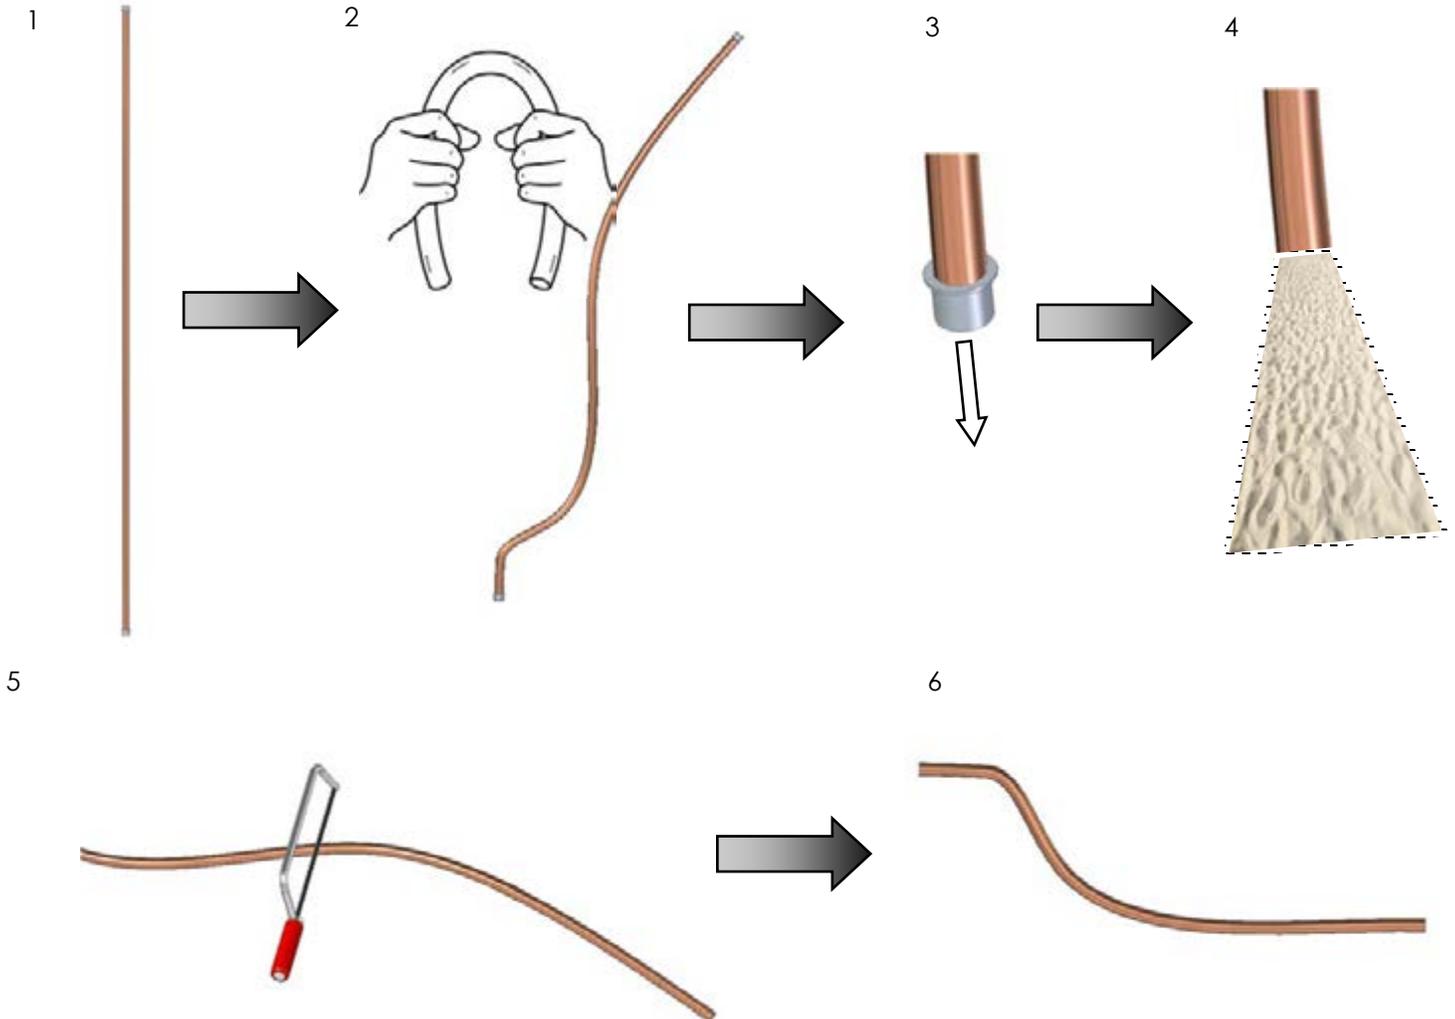


Deformable Mini Pole Accessory Installation

6

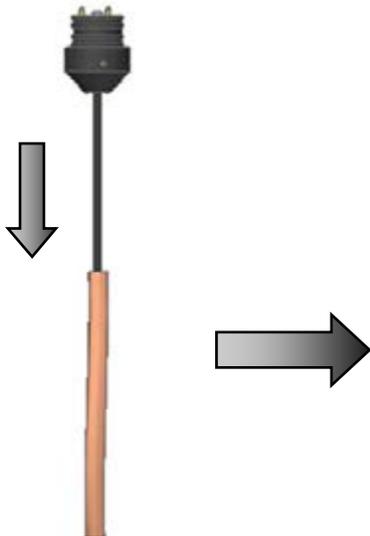

7

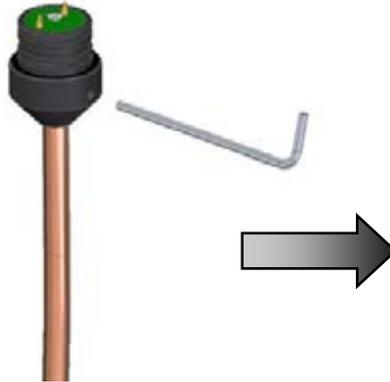

8



9



10




11



Deformable Mini Pole Accessory Installation

12

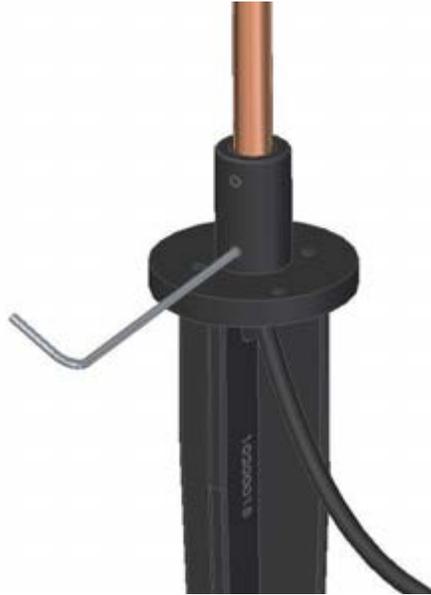

Fix spike in wet soil:

