



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.



IP66 IP67 IK06

Electrical Connections:

- LED lights must be **connected in parallel** respecting polarities.
- **CHOOSE POWER SUPPLY ACCORDINGLY.** Please consider the voltage through which fixtures are fed as well as the max power consumption.
- **Connect power only if all the fixtures are connected.**
- The power supplies **MUST** be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

ATTENTION: For Wall/Ceiling - It is the contractor's responsibility to caulk around all the edges between the fixture and the mounting surface to satisfy wet label requirements.

For In-Grade - It is the contractor's responsibility to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection. Contractor **MUST** use gel-filled wire nuts.

Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

NEVA PRO 4 RECESSED

INTEGRAL 120VAC


designplan®

installation instructions



FIXTURE INSTALLATION

GROUND INSTALLATION WITH OUTER CASING / (WC6520 - WC6521 - WC6522)

1 ON-OFF Version

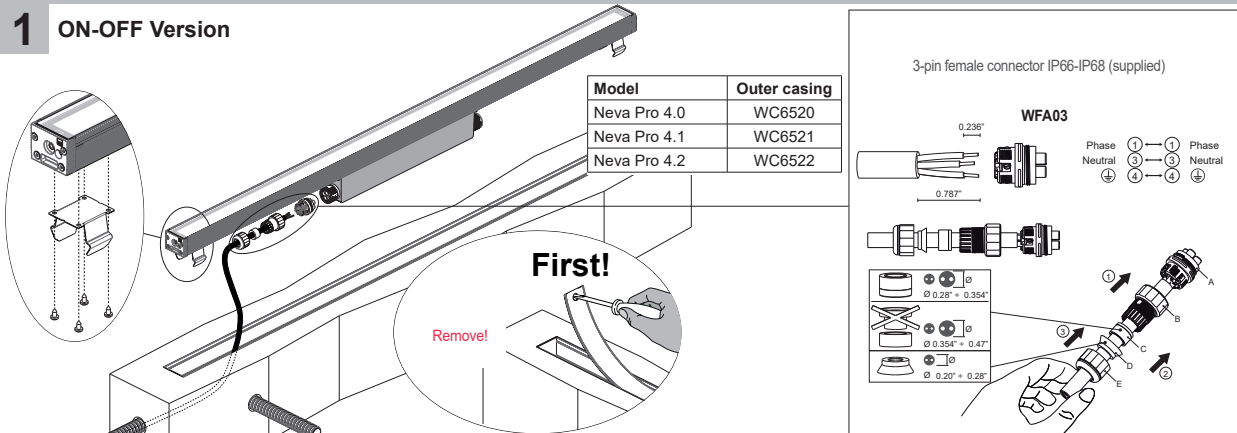

1 DIMMABLE Version

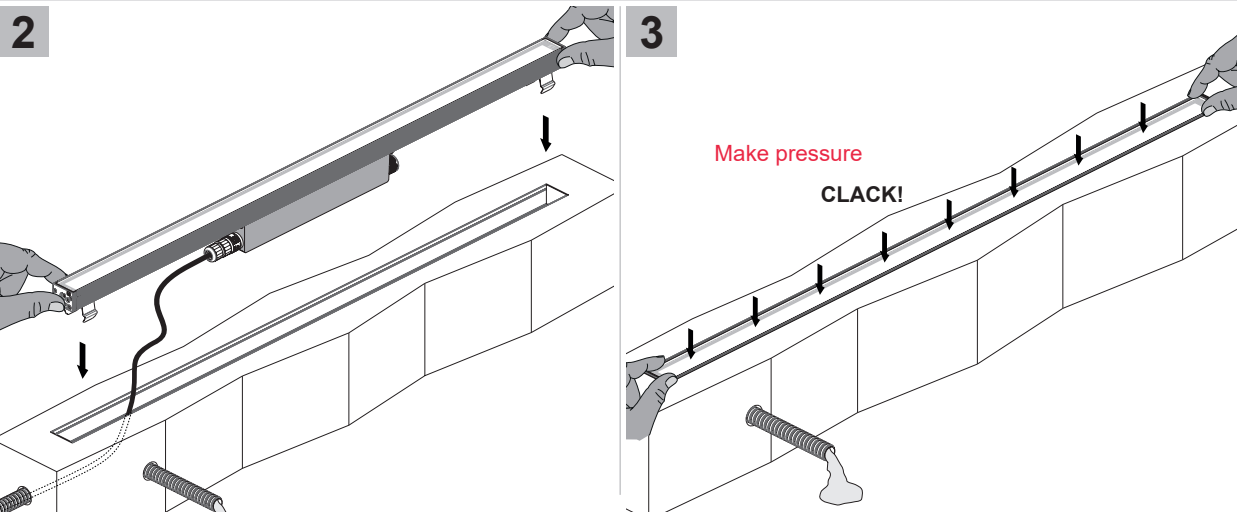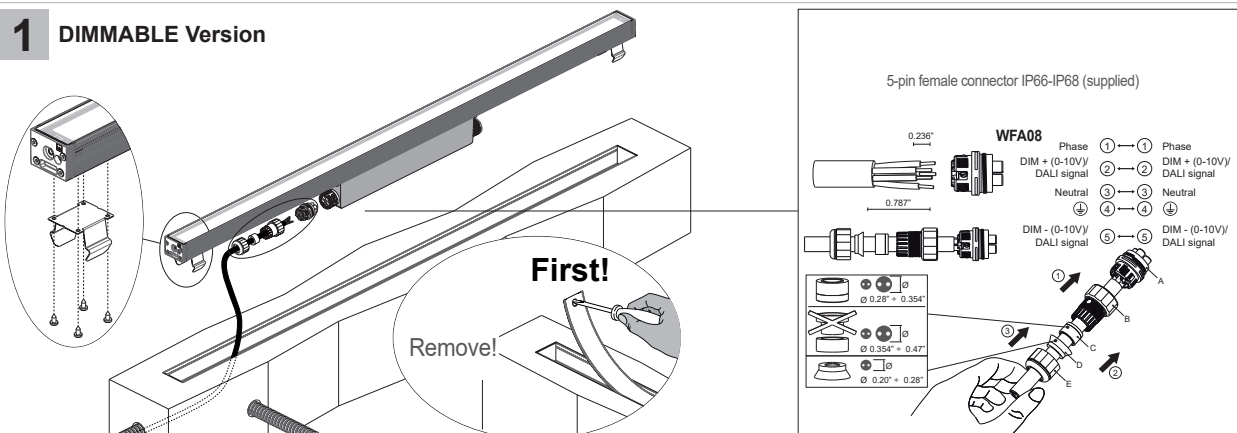


NEVA PRO 4 RECESSED

INTEGRAL 120VAC

designplan®

installation instructions

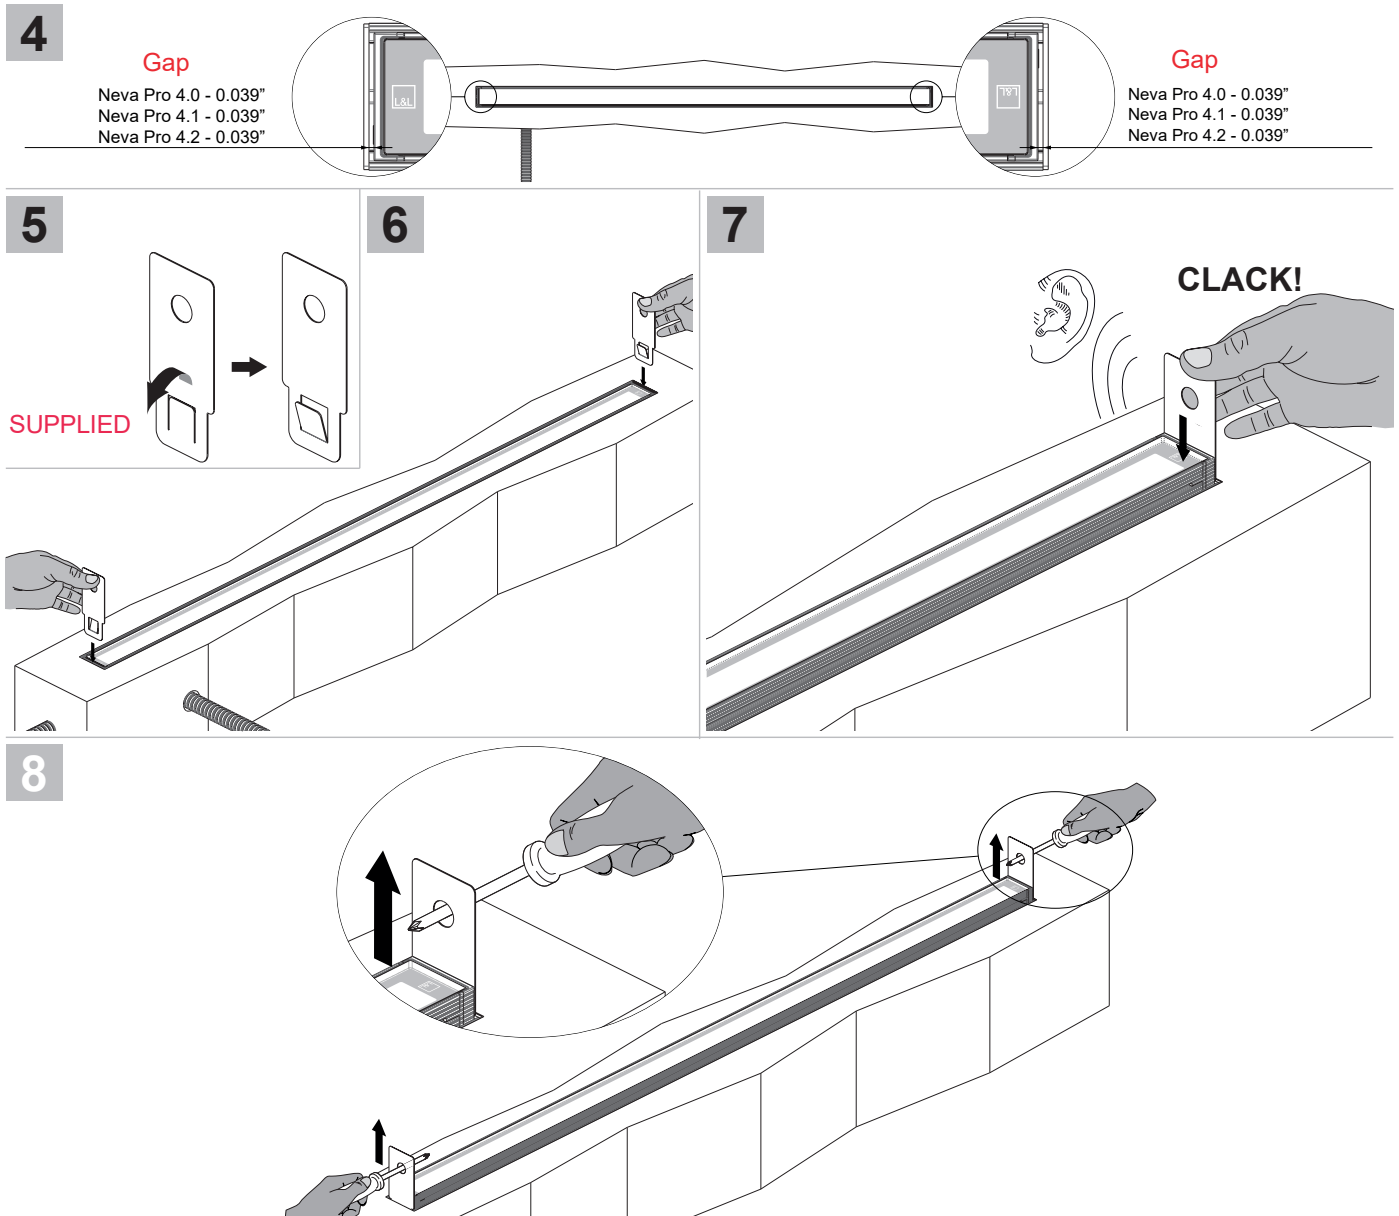

NEVA PRO 4 RECESSED

INTEGRAL 120VAC


designplan®

installation instructions

FIXTURE INSTALLATION


CEILING INSTALLATION WITH OUTER CASING FOR PLASTERBOARD / (WC6720 - WC6721 - WC6722)

1 ON-OFF Version

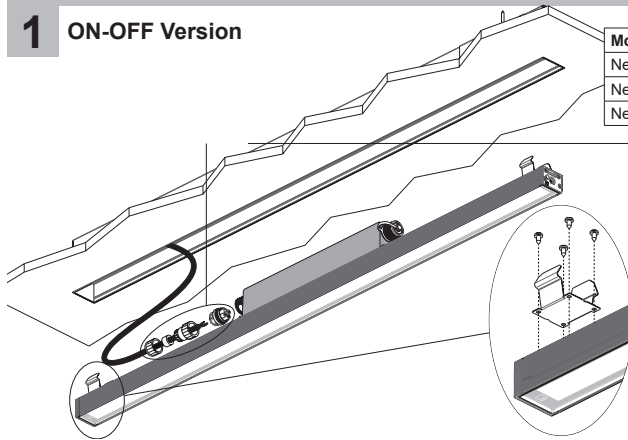


Model	Outer casing
Neva Pro 4.0	WC6720
Neva Pro 4.1	WC6721
Neva Pro 4.2	WC6722

3-pin female connector IP66-IP68 (supplied)

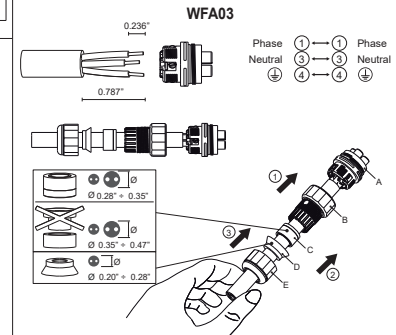


After wiring, tighten cable gland "B" on trim "A", then insert grommet "C" on cable gland "B". Finally, firmly fix nut "D" on cable gland "B".


1 DIMMABLE Version

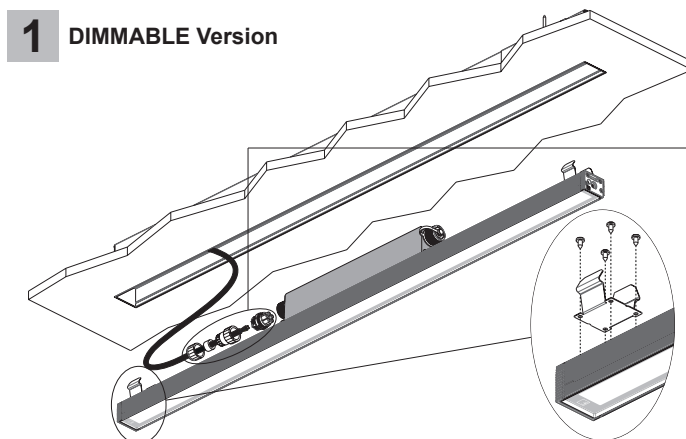


5-pin female connector IP66-IP68 (supplied)

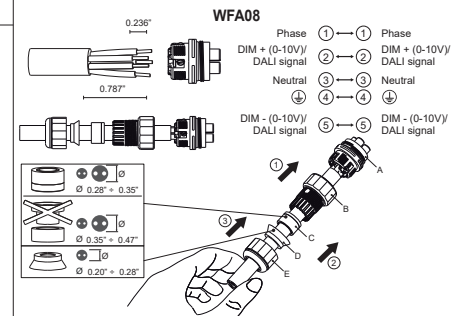

2

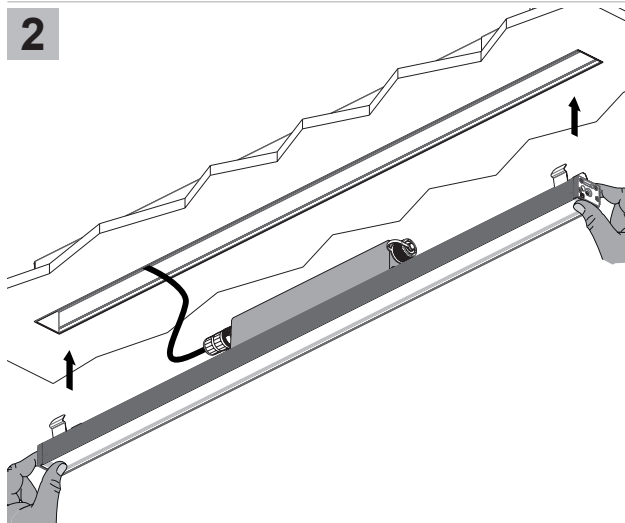

3

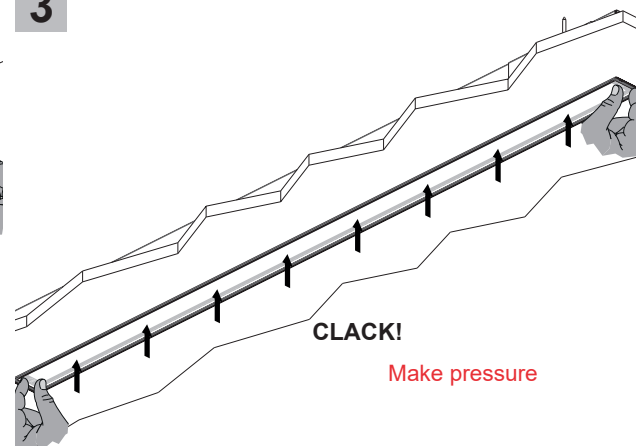

NEVA PRO 4 RECESSED

INTEGRAL 120VAC



designplan®

installation instructions

4

Gap

Neva Pro 4.0 - 0.039"
Neva Pro 4.1 - 0.039"
Neva Pro 4.2 - 0.039"

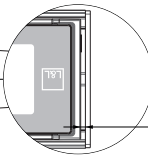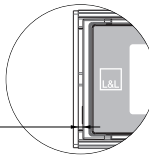


Gap


Neva Pro 4.0 - 0.039"
Neva Pro 4.1 - 0.039"
Neva Pro 4.2 - 0.039"

5


SUPPLIED

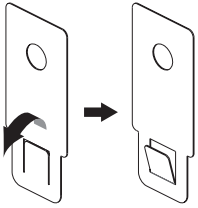

6

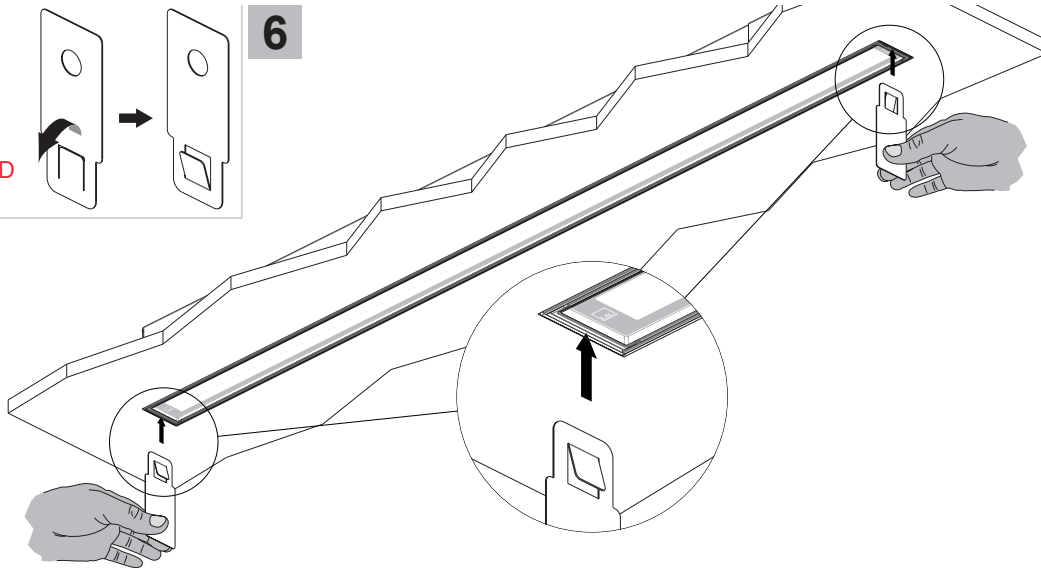

7

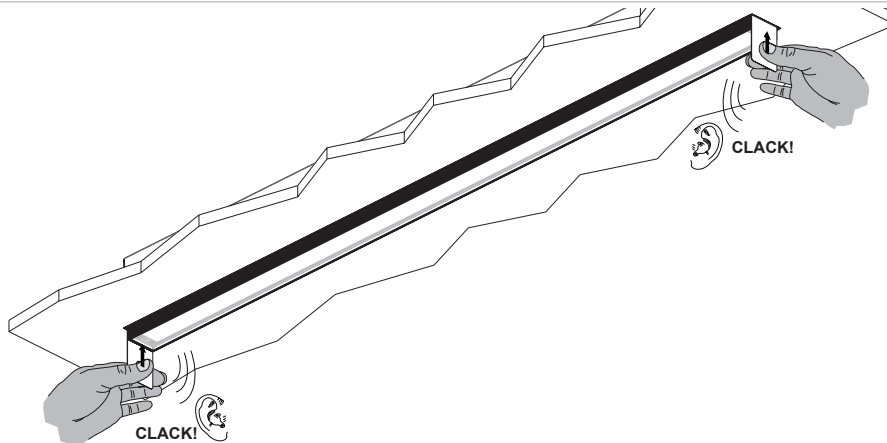

8

