Remote 24VDC



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.





Electrical Connections:

- LED lights must be **connected in parallel** respecting polarities.
- CHOOSE POWER SUPPLY ACCORDINGLY. Please consider the voltage through which fixtures are fed as well as the max power consumption.
- Connect power only if all the fixtures are connected.
- The power supplies MUST be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

ATTENTION: For In-Grade - It is the contractor's responsibility to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection. Contractor MUST use gel-filled wire nuts.


Maintenance


Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:


- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

P: 908-996-7710 F: 908-996-7042

Ground Installation - Outer Casing - WC0100

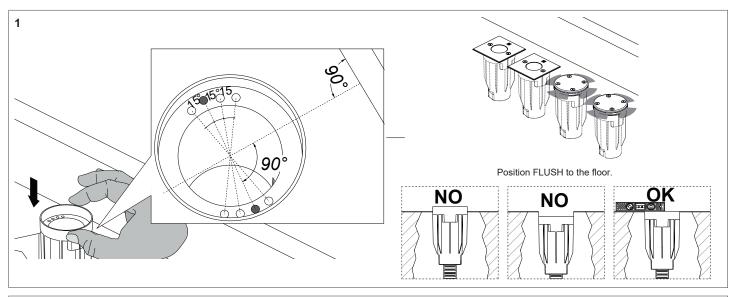

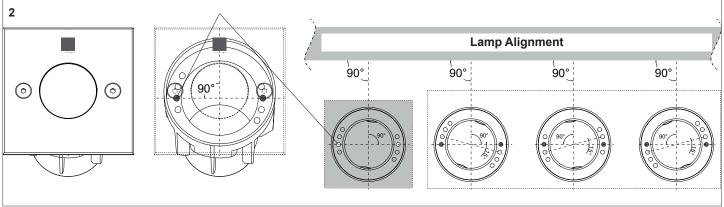


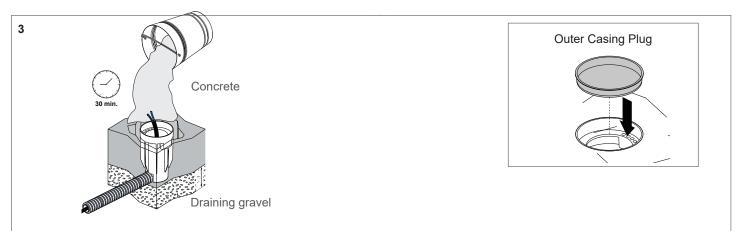



Use 8" of drainage gravel - check functionality: fill tube with water and verify full drainage within 30 min. If water remains, please utilize a different drainage system that functions properly. Contractor to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection.



Ground Installation - Outer Casing - WC0103

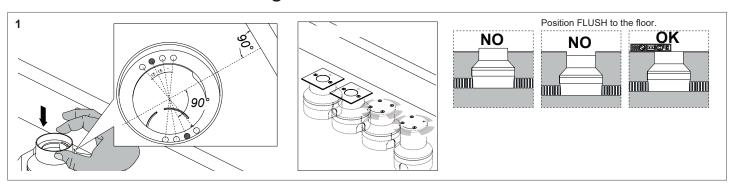


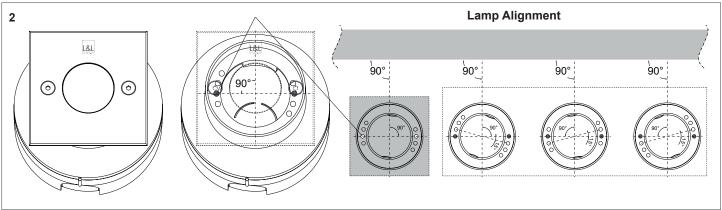


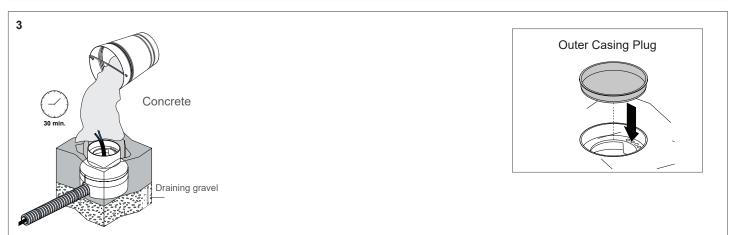


Use 8" of drainage gravel - check functionality: fill tube with water and verify full drainage within 30 min. If water remains, please utilize a different drainage system that functions properly. Contractor to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection.

Ground Installation - Outer Casing - WC0150

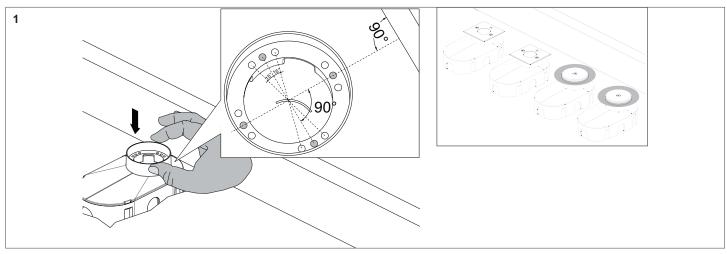

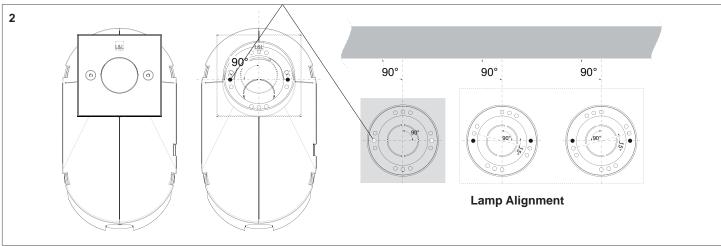

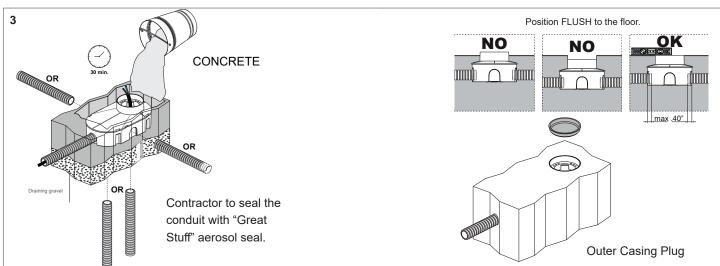



Use 8" of drainage gravel - check functionality: fill tube with water and verify full drainage within 30 min. If water remains, please utilize a different drainage system that functions properly.





Fixture Installation


installation instructions

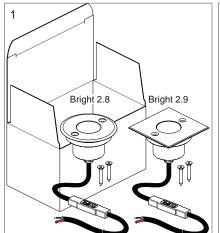

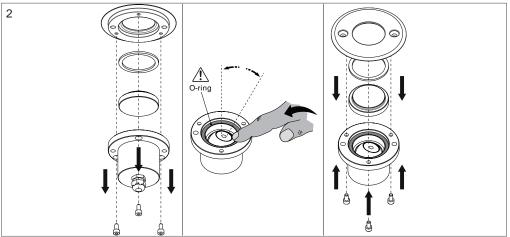

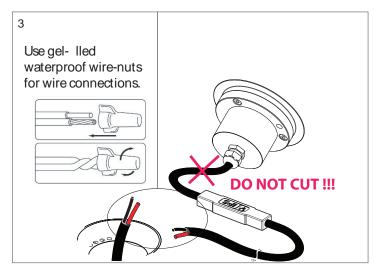

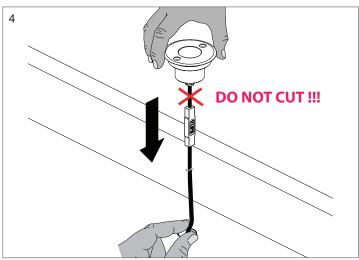


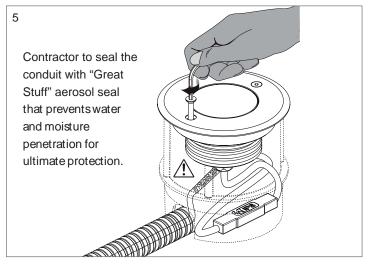



- It is the contractor's responsibility to caulk around the edges between the xture and the mounting surface, to satisfy wet label requirements.
- It is the contractor's responsibility to install Remote Driver in a suitable electrical enclosure.




Ceiling Installation - Fixing Springs - WG0100

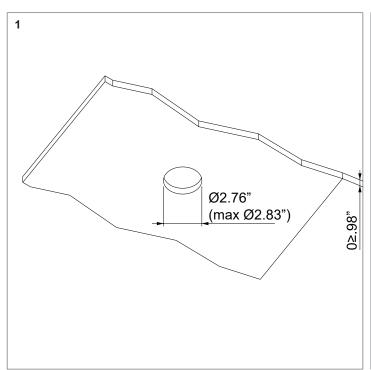

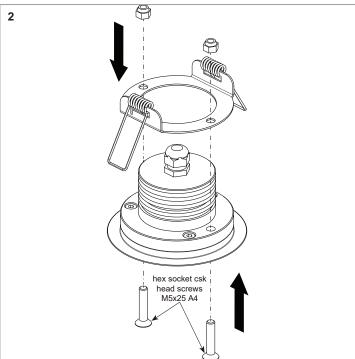

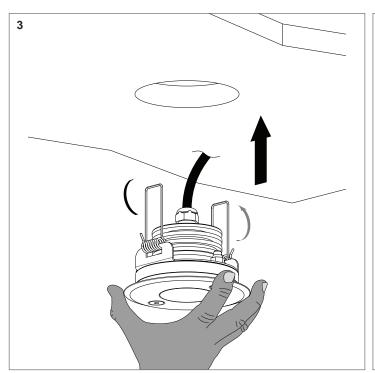

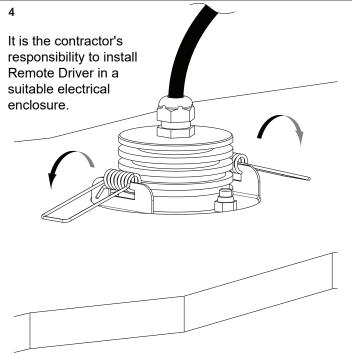

It is the contractor's responsibility to caulk around all seams of fixture to satisfy wet label requirements.





In-Grade Housing Installation (PPMP03088)




PPMP03088




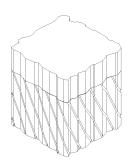

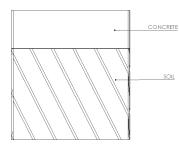



Drill pilot hole for core drilled housing through concrete and into soil below

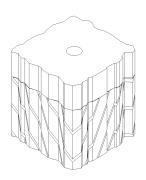

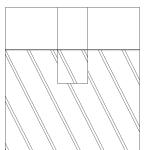



Create appropriate pathways through soil for running wires from fixtures to drivers

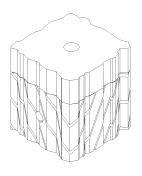


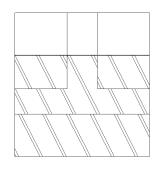


Apply epoxy to sides of newly drilled opening, insert core drilled housing into pilot hole and make it level




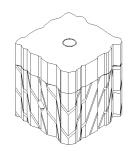


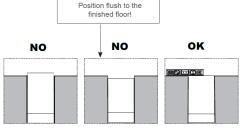


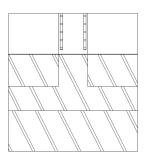

- Position core drilled application in place.Use epoxy to keep in place.
- Insert fixture and guide wires through pathways to driver
- It is the contractor's responsibility to create appropriate sized holes to fit housing and to create underground pathways for wiring.



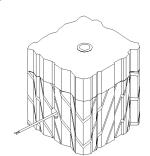


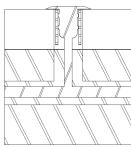



Wiring Diagram



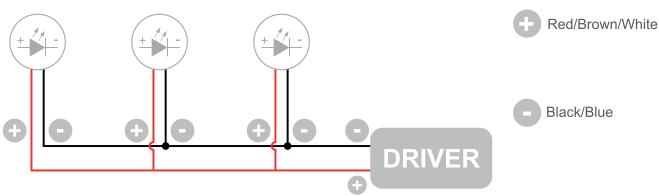



The individual lamps must be connected in parallel. Only power up the system once all the lamps have being connected.

- Only power up the system once all the lamps are connected. Connecting an individual lamp to an active power supply may cause the lamp to break due to over-voltage.
- Lamps and power supply units must be installed in well-ventilated boxes or locations to allow a natural heat diffusion and avoid the devices overheating.
- On the power system, install a surge protection device to reduce the intensity of any voltage spikes to protect the lighting fixtures from the risk of damage.
- Fixture NOT suitable for covering with thermally insulating material.