

D50_3W, GU4 LAMP(PROVIDED BY OTHERS), REMOTE 350mA
D70_7W, GU10 LAMP(PROVIDED BY OTHERS), 120VAC


installation instructions



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.

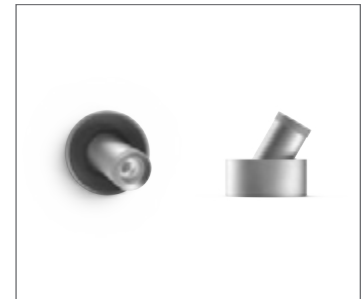

IP66 IK08

Electrical Connections:

- LED lights must be **connected in series** respecting polarities.
- **CHOOSE POWER SUPPLY ACCORDINGLY.** Please consider the voltage through which fixtures are fed as well as the max power consumption.
- **Connect power only if all fixtures are connected.**
- The power supplies **MUST** be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- The electronic power supply is current-stable, therefore it partially compensates the voltage-drop problems related to the cable length; we suggest not to exceed 100 ft.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

ATTENTION: For Wall/Ceiling - It is the contractor's responsibility to caulk around all the edges between the fixture and the mounting surface to satisfy wet label requirements.

For In-Grade - It is the contractor's responsibility to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection. Contractor **MUST** use gel-filled wire nuts.

Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

HOKU D-50, D-70

D50_3W LED, 12 DC GU4 LAMP(PROVIDED BY OTHERS)
D70_7W LED, 120VAC GU10 LAMP(PROVIDED BY OTHERS)

installation instructions

D70_GU10 VERSION INSTALLATION:




Unscrew the ring nut



Insert bulb M11 into GU4 lamp holder




Screw the ring nut


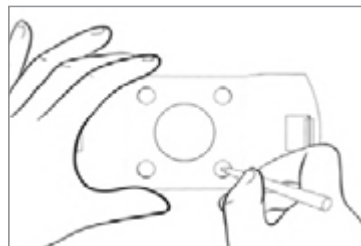


Draw fixing holes

APPLIANCE INSTALLATION PREPARATION:

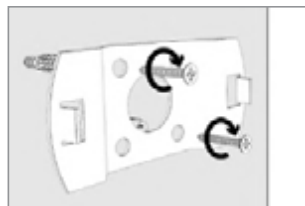

Drill the wall in the traced marks, insert the fixing plugs and align the bracket and screws

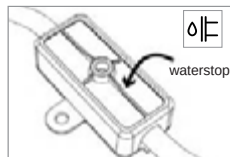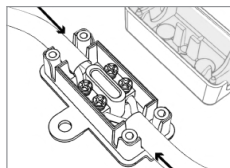

Cable wiring using waterstop connector



NOT SUPPLY

Suggested cable cross-section

- up to 2 x 18 AWG
Cable external diameter min. -
max. 0.189" 0 0.236" DIA.




Use gel-filled waterproof wire-nuts for wire connections.



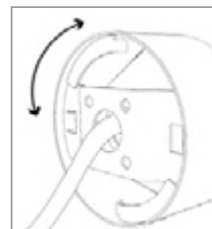
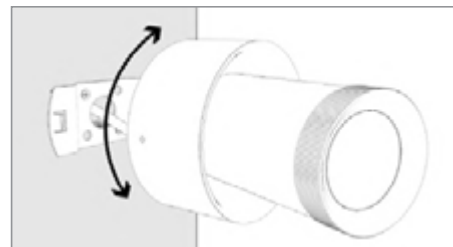


Insert the device and rotate it until it locks

DEVICE FIXING AND POSITIONING:

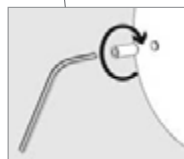

Lock the device body using a 2 mm Allen key

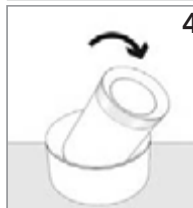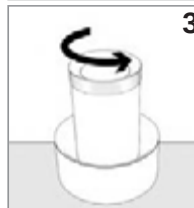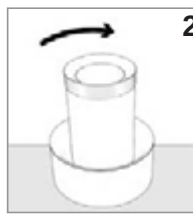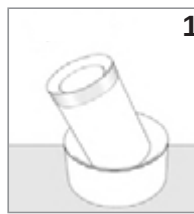

1 Starting position of lighting fixture

2 Move the projector to the center

3 Rotate until the correct inclination is reached


4 Orient the projector as desired

WARNING: DO NOT FORCE INCLINATION AND ROTATION


Wiring Diagram

installation instructions

Single Fixture Connection:

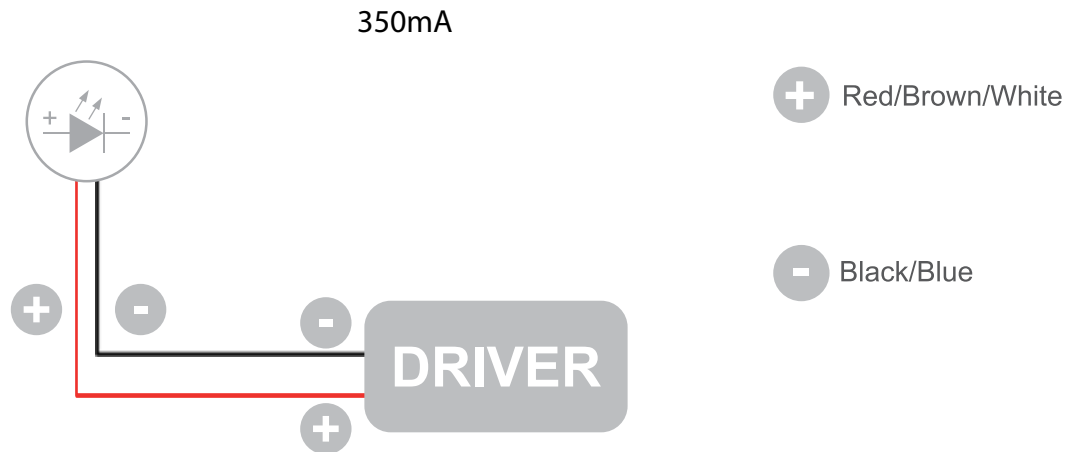

Multiple Fixtures Connection in Series:

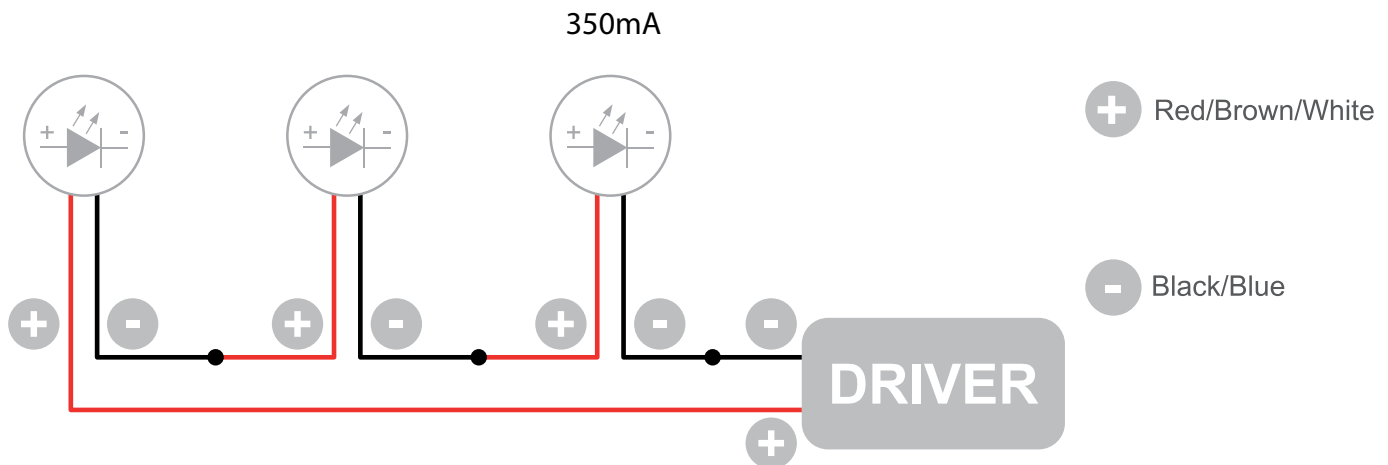

The individual lamps must be connected in series.

Only power up the system once all the lamps have been connected.

- LED lights work at constant current. When choosing a power supply unit, you need to consider the current by which the LEDs are driven and their maximum power consumption.
- Only power up the system once all the lamps are connected. Connecting an individual lamp to an active power supply may cause the lamp to break due to over-voltage.
- The electronic power supply is constant current, so to a certain extent it automatically compensates the voltage drop associated with cable length; however, we advise not exceeding 100 feet.
- Lamps and power supply units must be installed in well-ventilated boxes or locations to allow a natural heat diffusion and avoid the devices overheating.
- On the power system, install a surge protection device to reduce the intensity of any voltage spikes to protect the lighting fixtures from the risk of damage.
- Fixture NOT suitable for covering with thermally insulating material.