B30 / B55 TRACK

Remote 48VDC

installation instructions

INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for INDOOR applications.





Electrical Connections:

- LED lights must be **connected in parallel** respecting polarities.
- **CHOOSE POWER SUPPLY ACCORDINGLY.** Please consider the voltage through which fixtures are fed as well as the max power consumption.
- **Connect power only if all the fixtures are connected.**
- The power supplies MUST be installed in aerated rooms, far from heat sources. Overworking or lack of air circulation will not permit natural dissipation.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

Maintenance


Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:


- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.

sales@designplan.com
www.designplan.com


79 Trenton Avenue, Frenchtown NJ 08825
© Copyright 2024 Designplan Lighting, Inc.
P: 908-996-7710
F: 908-996-7042

HOW TO CUT THE TRACK

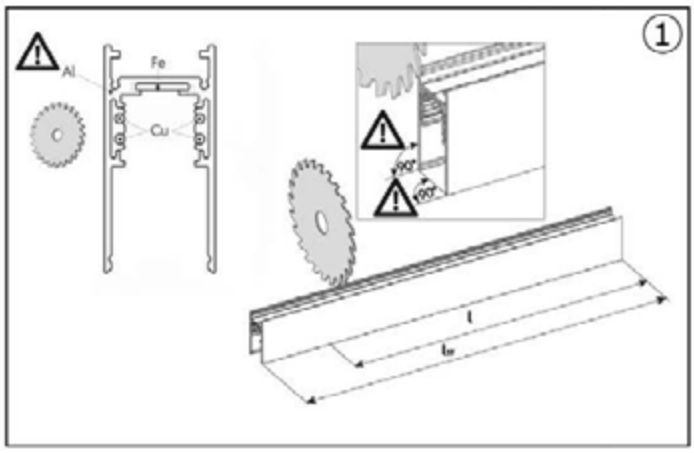


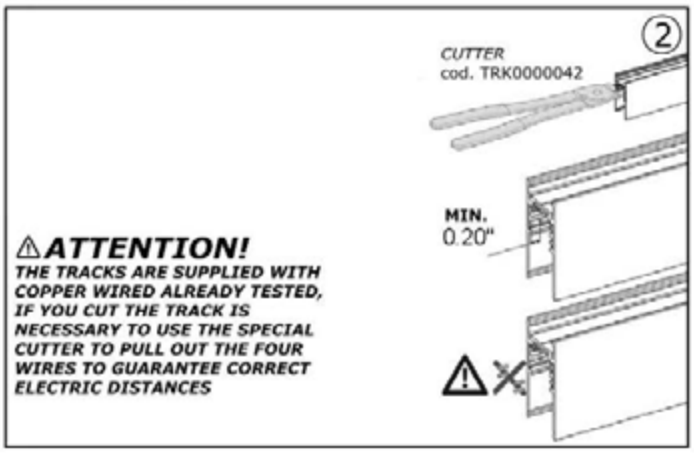



HOW TO INSTALL THE TRACK BY SCREWS

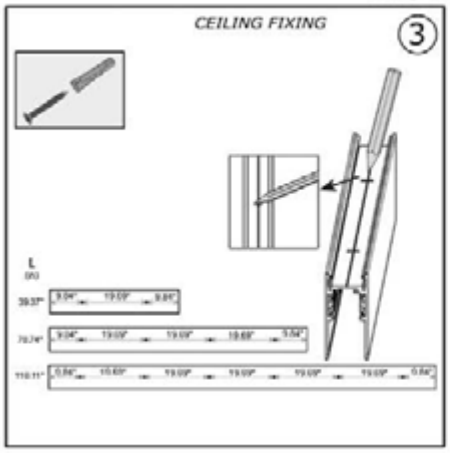



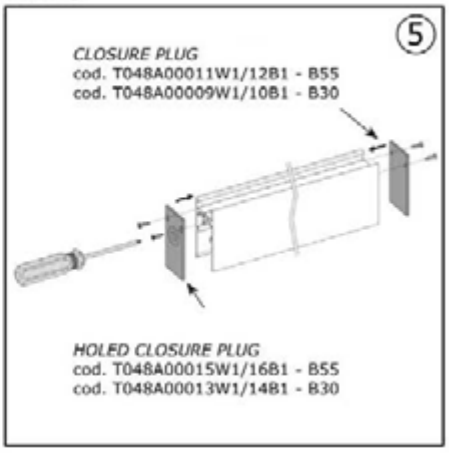

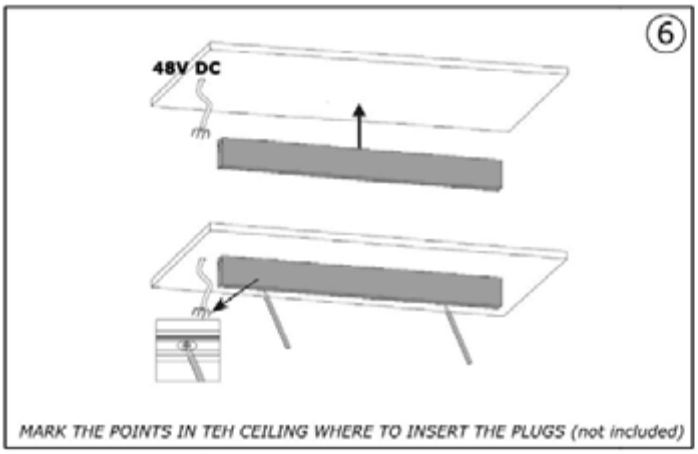

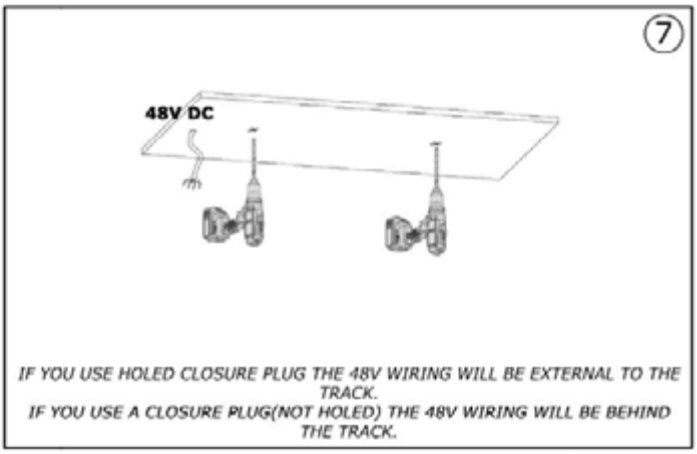



sales@designplan.com
www.designplan.com

79 Trenton Avenue, Frenchtown NJ 08825


© Copyright 2024 Designplan Lighting, Inc.


P: 908-996-7710
F: 908-996-7042

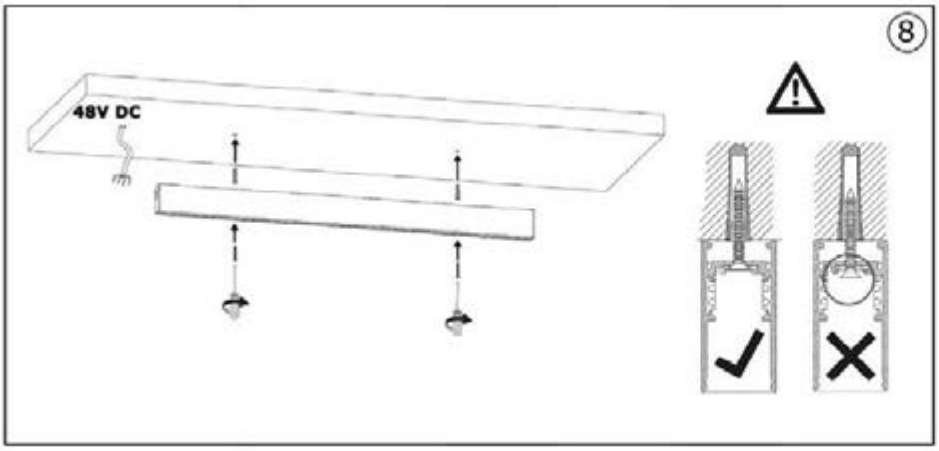


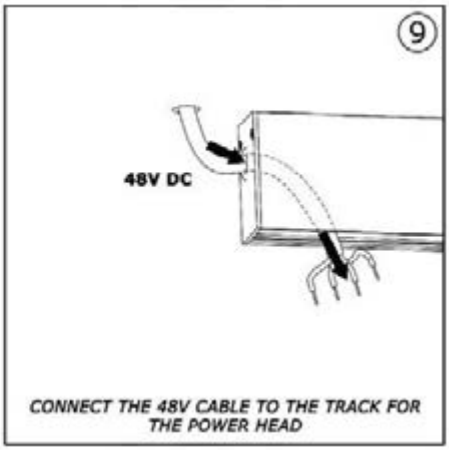



HOW TO INSTALL A CUTTED TRACK

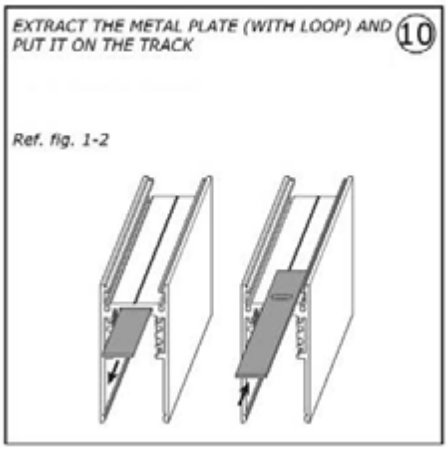

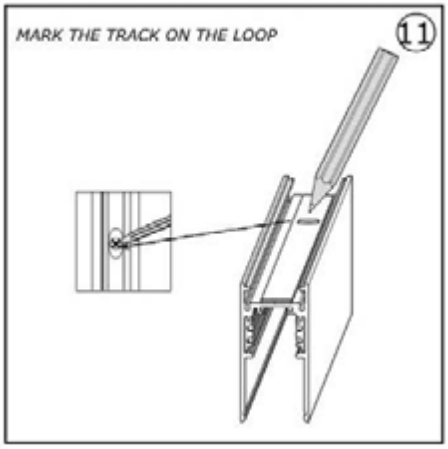

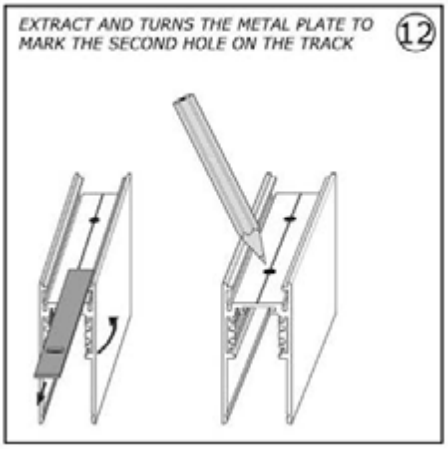

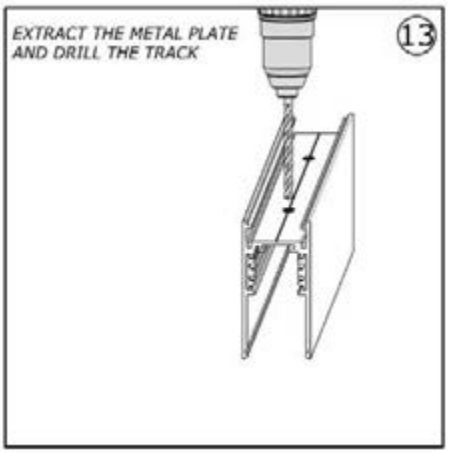

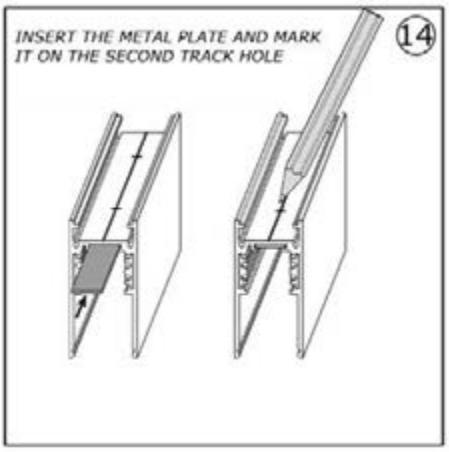





sales@designplan.com
www.designplan.com

79 Trenton Avenue, Frenchtown NJ 08825


© Copyright 2024 Designplan Lighting, Inc.


P: 908-996-7710
F: 908-996-7042

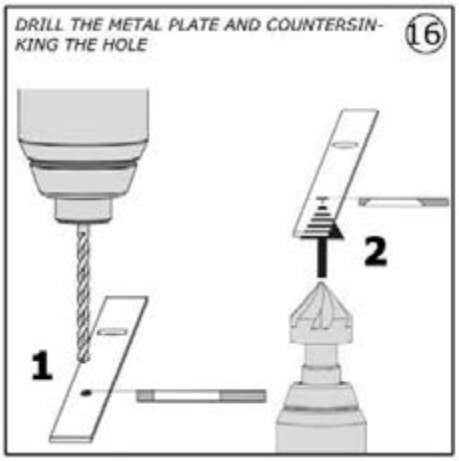


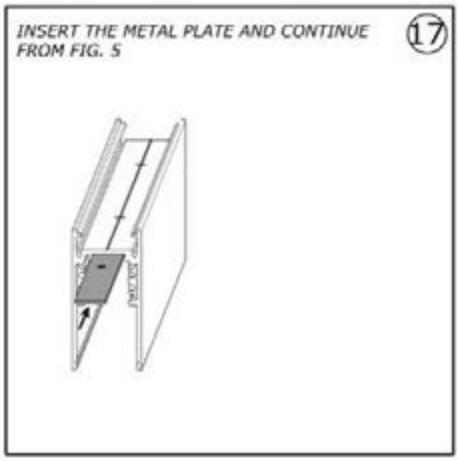


HOW TO INSTALL A SUSPENDED TRACK

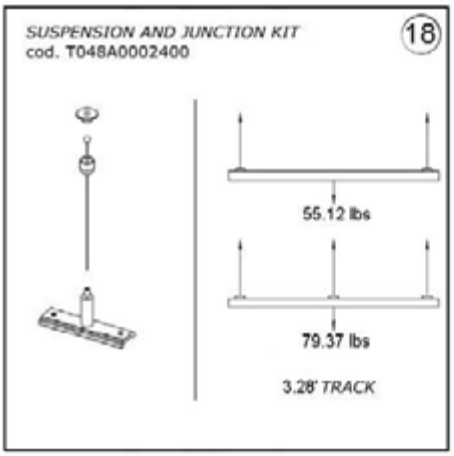

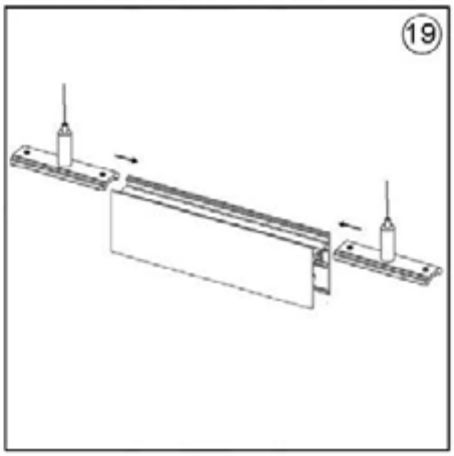

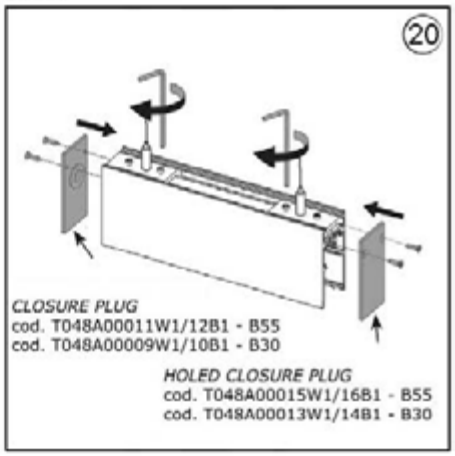

FIXING IN ROW USE

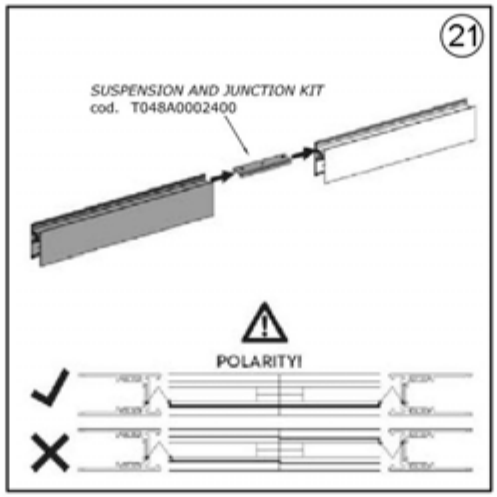

sales@designplan.com
www.designplan.com

79 Trenton Avenue, Frenchtown NJ 08825

© Copyright 2024 Designplan Lighting, Inc.

P: 908-996-7710
F: 908-996-7042

B30 / B55 TRACK

Fixture Installation on 48VDC Track

installation instructions








- No tools are required to install the fixture onto the track.
- The fixture can be secured onto the track by pressing it in gently in by hand until you hear a "click". It will remain secured and electrically powered.
- The location of the fixture may easily be changed by pulling it gently to one direction or the other.
- The fixture may be easily removed from the track by pulling it out.

sales@designplan.com
www.designplan.com

79 Trenton Avenue, Frenchtown NJ 08825
© Copyright 2024 Designplan Lighting, Inc.
P: 908-996-7710
F: 908-996-7042

Wiring Diagram

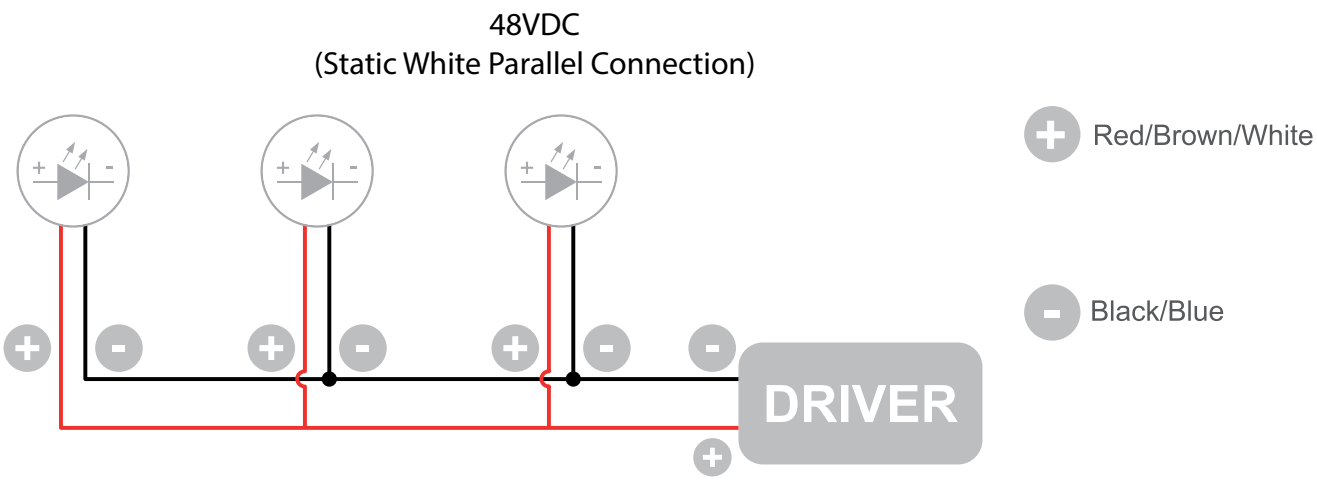

The individual lamps must be connected in parallel. Only power up the system once all the lamps have being connected.

- Only power up the system once all the lamps are connected. Connecting an individual lamp to an active power supply may cause the lamp to break due to over-voltage.
- Lamps and power supply units must be installed in well-ventilated boxes or locations to allow a natural heat diffusion and avoid the devices overheating.
- On the power system, install a surge protection device to reduce the intensity of any voltage spikes to protect the lighting fixtures from the risk of damage.
- Fixture NOT suitable for covering with thermally insulating material.

sales@designplan.com
www.designplan.com

79 Trenton Avenue, Frenchtown NJ 08825

© Copyright 2024 Designplan Lighting, Inc.

P: 908-996-7710
F: 908-996-7042