


BOTTEGA 7 FLANGE WASTE BINS






STAINLESS STEEL



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

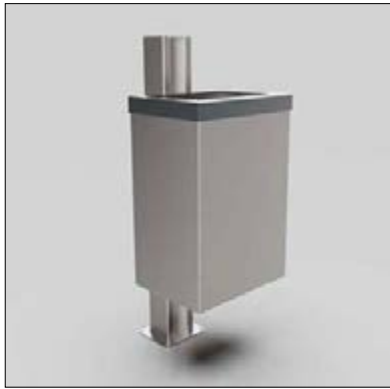

Fixture Dimensions

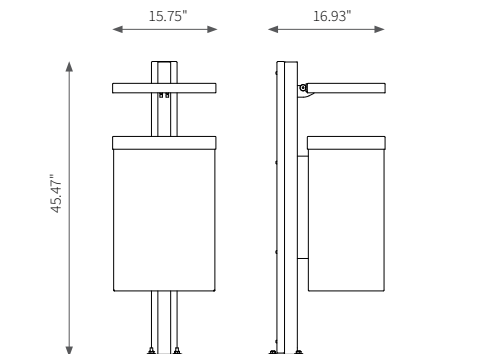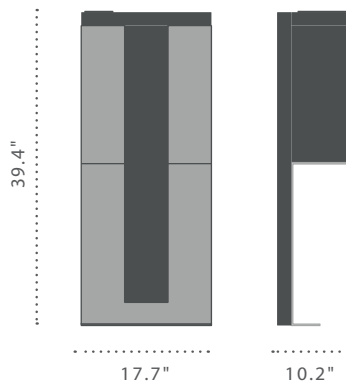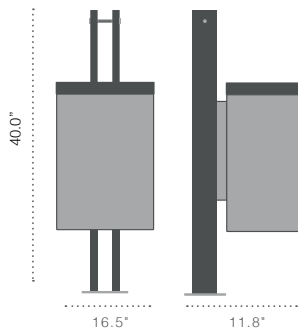

LAME



LINEA




NERVO

BOTTEGA 7 FLANGE WASTE BINS




STAINLESS STEEL

FIXTURE INSTALLATION

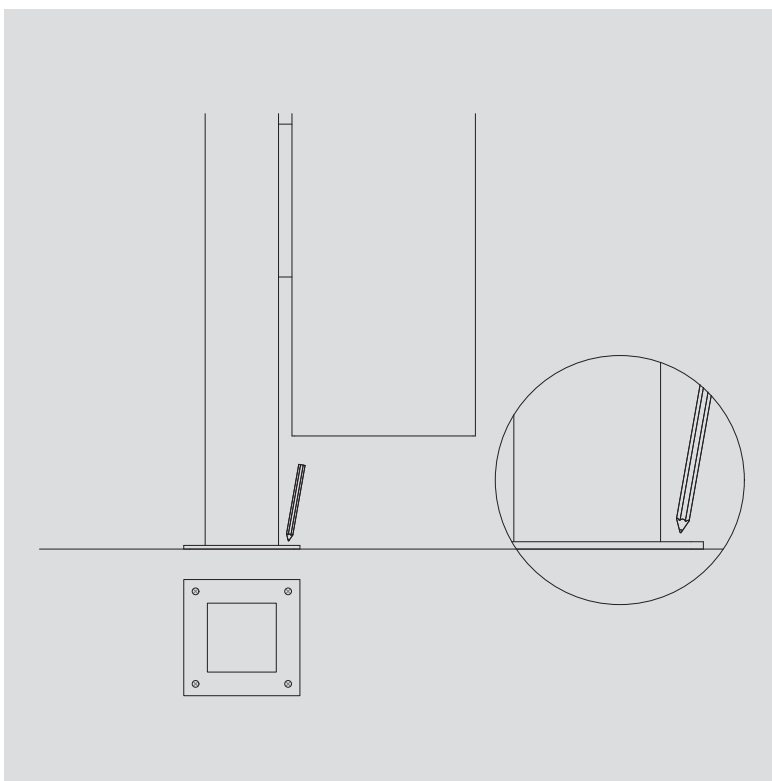

Step 1

Position the litter bin and use a pencil to mark the points where the anchors will be installed.

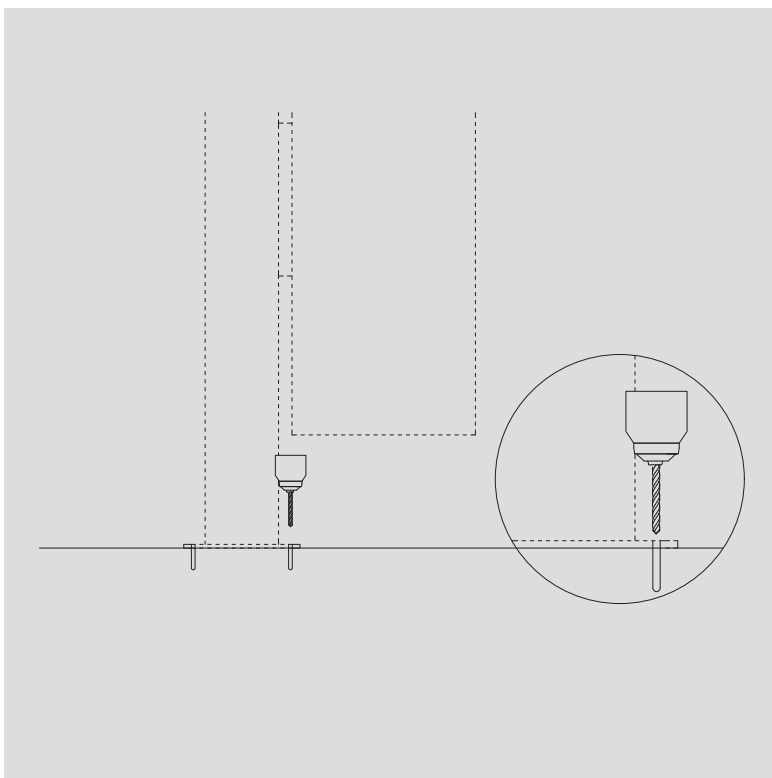

Step 2


Drill holes at the marked points.

BOTTEGA 7 FLANGE WASTE BINS




STAINLESS STEEL

FIXTURE INSTALLATION

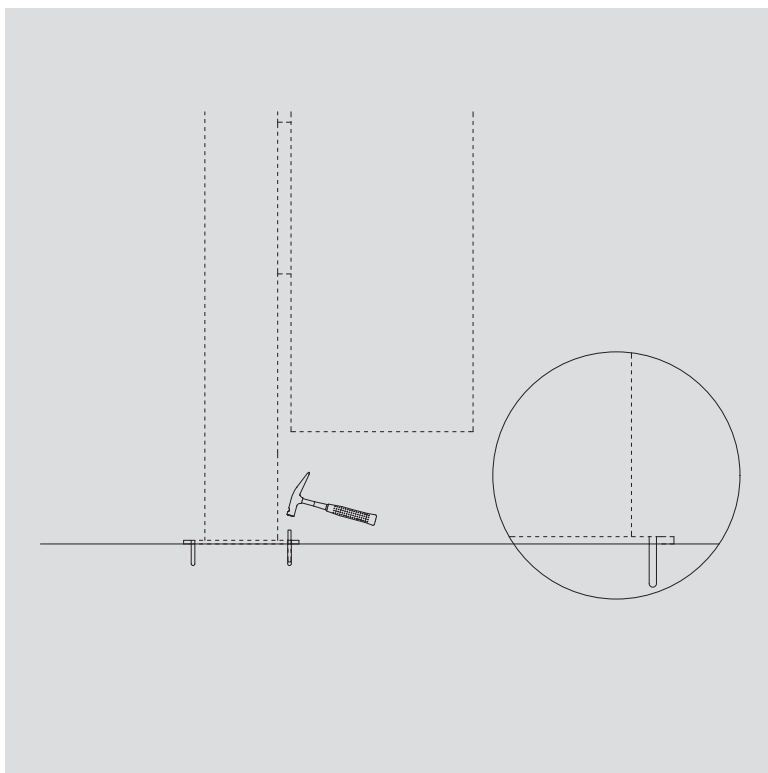

Step 3

Drive in the anchors.

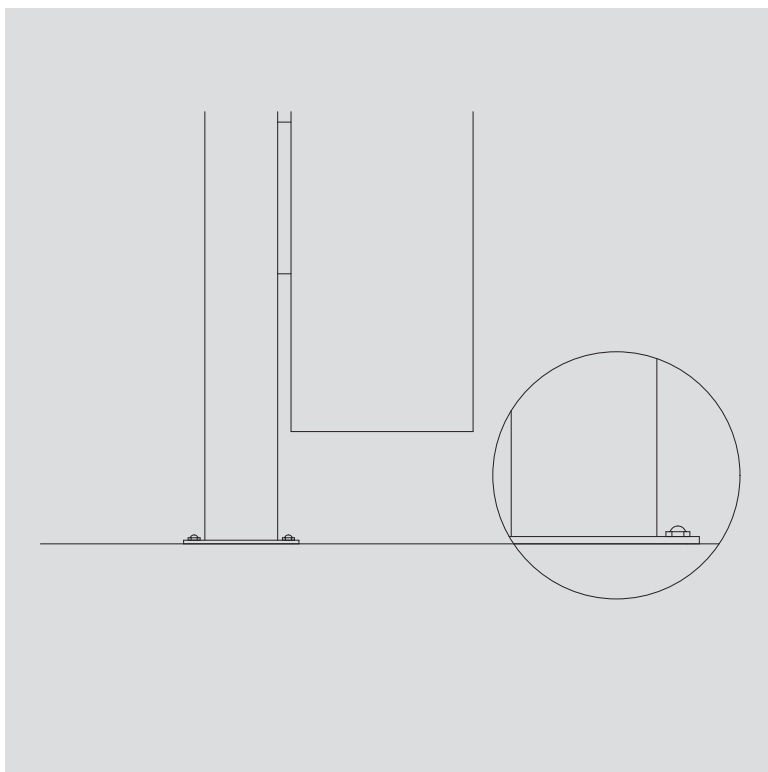

Step 4

Secure the anchors with cap nuts.