



**INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.**

**DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.**

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.



**IP65/IP67, IK10**

**ATTENTION:** For In-Grade - It is the contractor's responsibility to seal the conduit with "Great Stuff" aerosol seal that prevents water and moisture penetration for ultimate protection. Contractor **MUST** use gel-filled wire nuts.

## Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.


# VITRE 2.0 / 2.1 / 2.2

Integral 120VAC (18W / 36W / 58W)

designplan®


installation instructions

## 1 WMA04

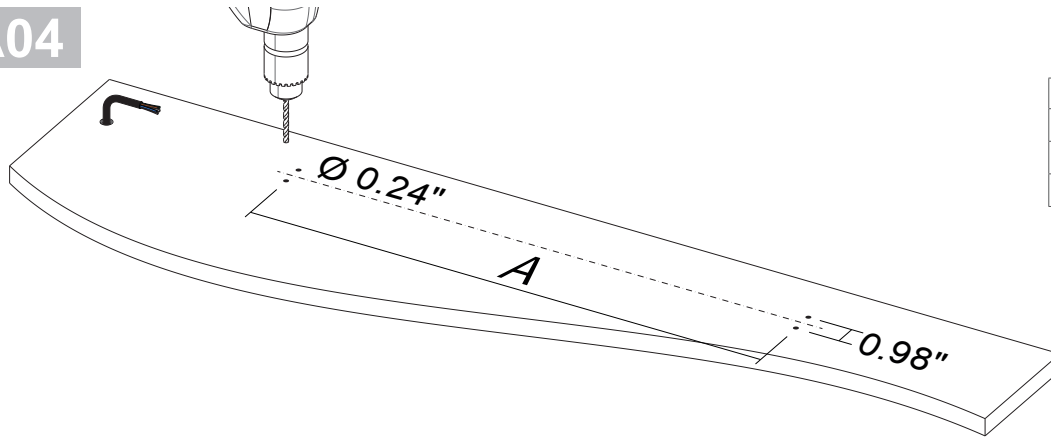


Model	A (in)
Vitre 2.0	max 23.31"
Vitre 2.1	max 45.35"
Vitre 2.2	max 67.40"

## 2

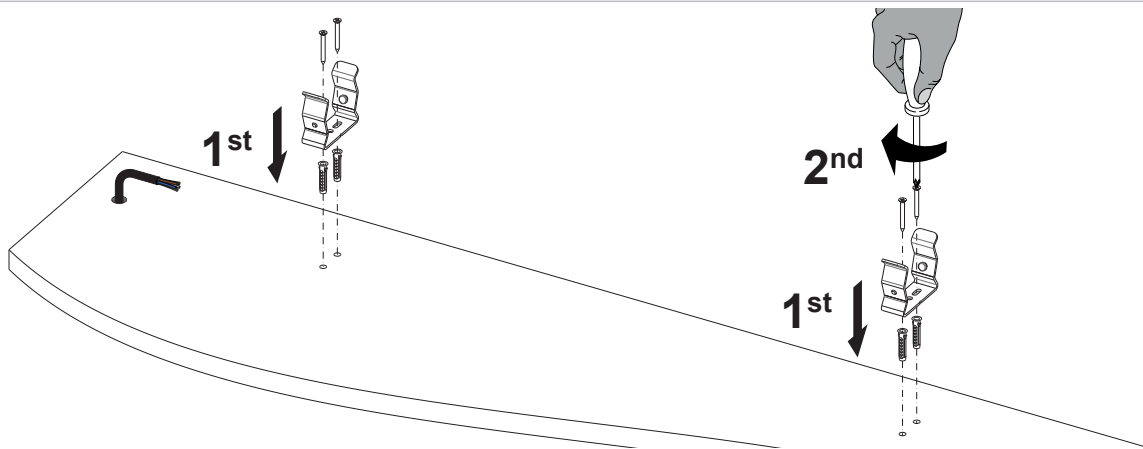

## 3

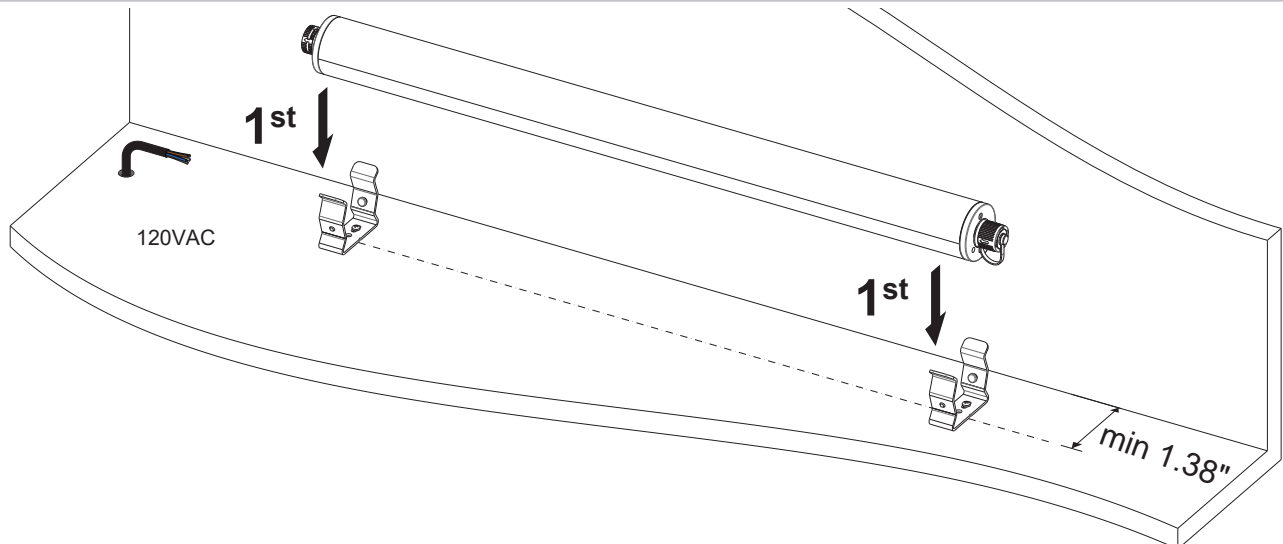

# VITRE 2.0 / 2.1 / 2.2

Integral 120VAC (18W / 36W / 58W)



installation instructions

**4**

WFA07 (4 poles single Female connector) supplied

**ON - OFF**

Brown (phase)	① ↔ ①	Brown (phase)
not used	② ↔ ②	not used
Blue (neutral)	③ ↔ ③	Blue (neutral)
Not used	④ ↔ ④	Not used

**DALI or PUSH L**

Phase	① ↔ ①	Phase
DALI signal	② ↔ ②	DALI signal - PUSH L
Neutral	③ ↔ ③	Neutral
DALI signal	④ ↔ ④	DALI signal - PUSH N

IN-OUT connection

**5**

WFA01 (4 poles single Male connector) not supplied

Cable  
ON - OFF: H05RN-F 2 poles  
DALI / DALI Push: H05RN-F 4 poles not supplied

**ON - OFF**

Brown (phase)	① ↔ ①	Brown (phase)
not used	② ↔ ②	not used
Blue (neutral)	③ ↔ ③	Blue (neutral)
Not used	④ ↔ ④	Not used

**DALI or PUSH L**

Phase	① ↔ ①	Phase
DALI signal	② ↔ ②	DALI signal - PUSH L
Neutral	③ ↔ ③	Neutral
DALI signal	④ ↔ ④	DALI signal - PUSH N

**Cascade connection**

Model	Maximum number
Vitre 2.0	70
Vitre 2.1	40
Vitre 2.2	25

