Remote: KRILL 2.0 700mA: KRILL 3.0 350mA

#### **INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO** PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

#### **DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION!** Please read all instructions before installation.

- Keep these instructions for future reference. •
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty. •
- The main power connection must be in accordance with local electrical codes.
- Suitable for INDOOR applications.
- DO NOT INSTALL INSULATION WITHIN 3.0" (76mm) OF ANY PART OF • THE LUMINAIRE.

#### **Electrical Connections:**

- LED lights must be **connected in series** respecting polarities.
- CHOOSE POWER SUPPLY ACCORDINGLY. Please consider the voltage through which fixtures are fed as well as the max power consumption.
- Connect power only if all fixtures are connected. •
- The power supplies MUST be installed in aerated rooms, far from heat sources. Overworking or lack of air • circulation will not permit natural dissipation.
- The electronic power supply is current-stable, therefore it partially compensates the voltage-drop problems • related to the cable length; we suggest not to exceed 100 ft.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

#### Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device. .
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is • intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs • of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.








installation instructions

#### **Fixture Installation**

designplan

installation instructions

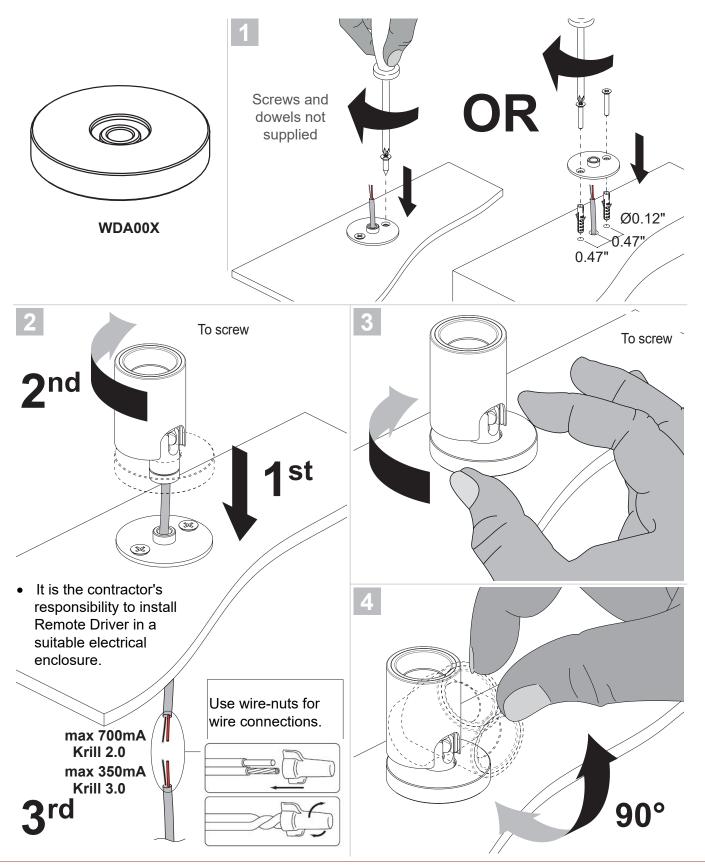


sales@designplan.com www.designplan.com 79 Trenton Avenue, Frenchtown NJ 08825 © Copyright 2021 Designplan Lighting, Inc. P: 908-996-7710 F: 908-996-7042 2 of 7

#### **Fixture Installation**

installation instructions


designplan@

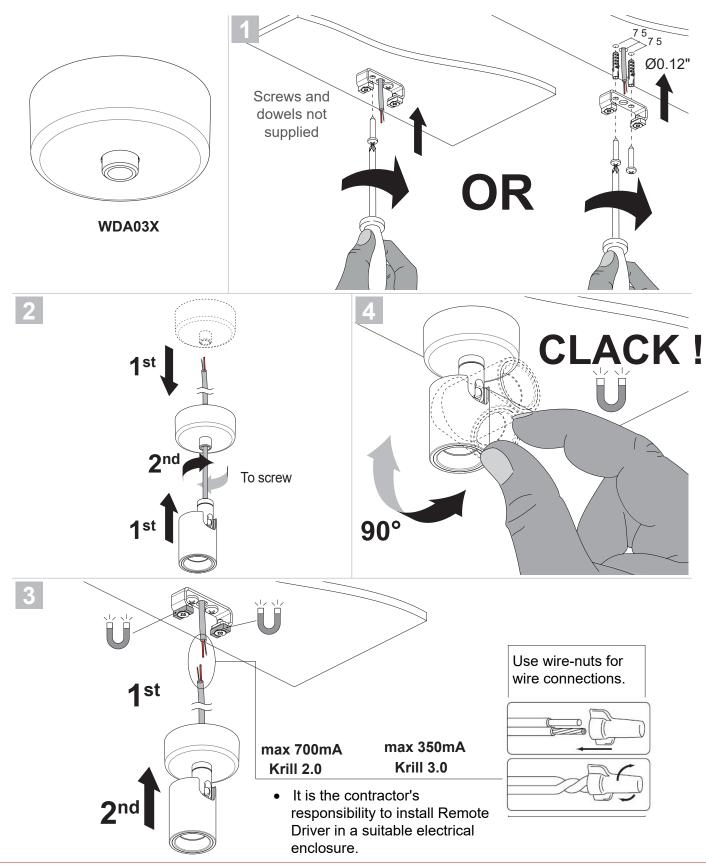

sales@designplan.com www.designplan.com **79 Trenton Avenue, Frenchtown NJ 08825** © Copyright 2021 Designplan Lighting, Inc. P: 908-996-7710 F: 908-996-7042 3 of 7

### designplan@


**Fixture Installation** 

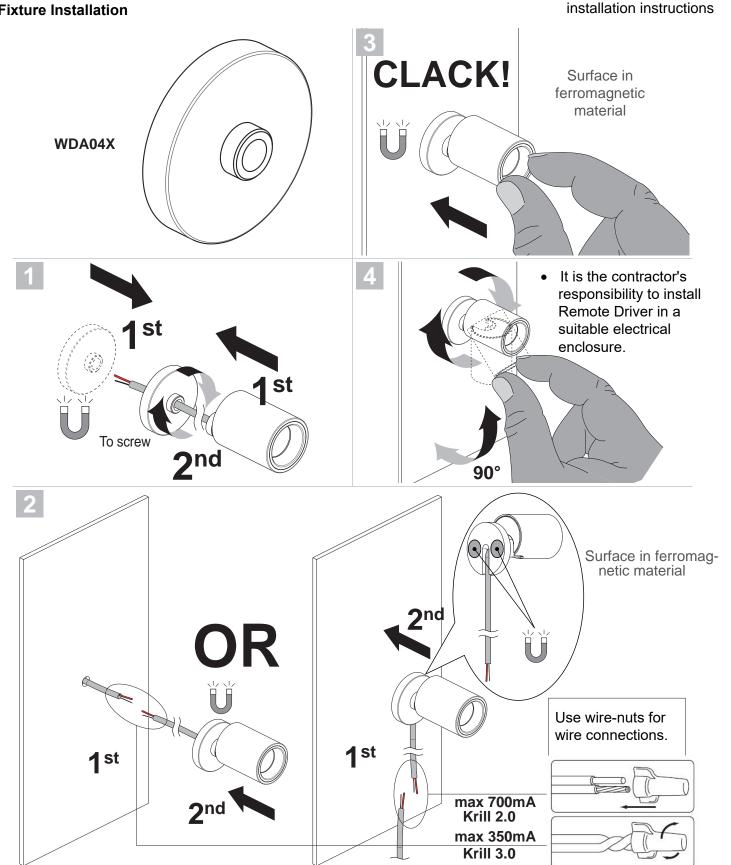

sales@designplan.com www.designplan.com

79 Trenton Avenue, Frenchtown NJ 08825 © Copyright 2021 Designplan Lighting, Inc.

P: 908-996-7710 F: 908-996-7042 4 of 7

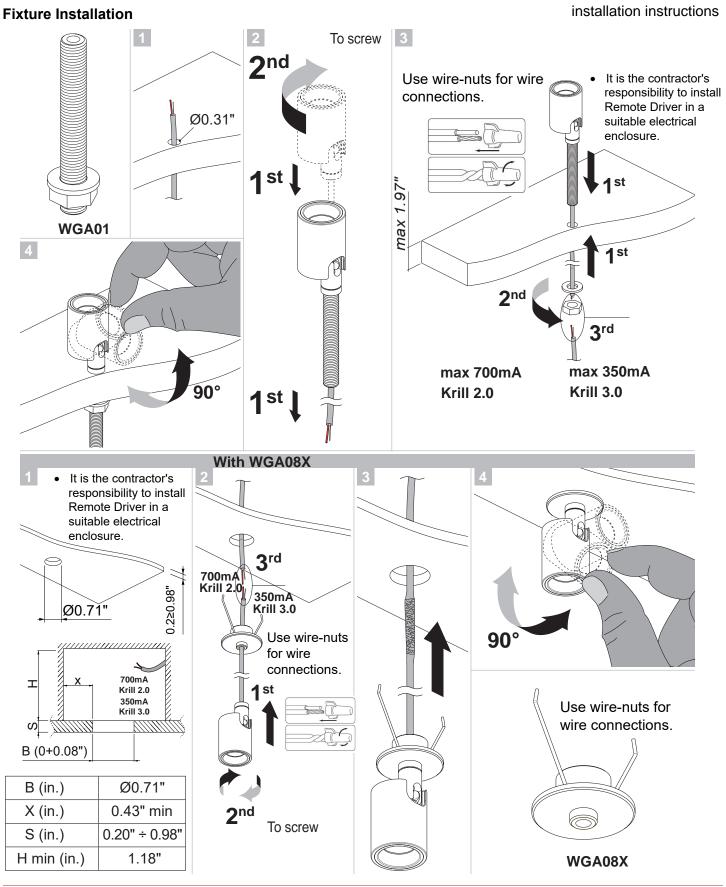


sales@designplan.com www.designplan.com 79 Trenton Avenue, Frenchtown NJ 08825 © Copyright 2021 Designplan Lighting, Inc. P: 908-996-7710 F: 908-996-7042 5 of 7

designplan@

#### designplan@

#### **Fixture Installation**


installation instructions

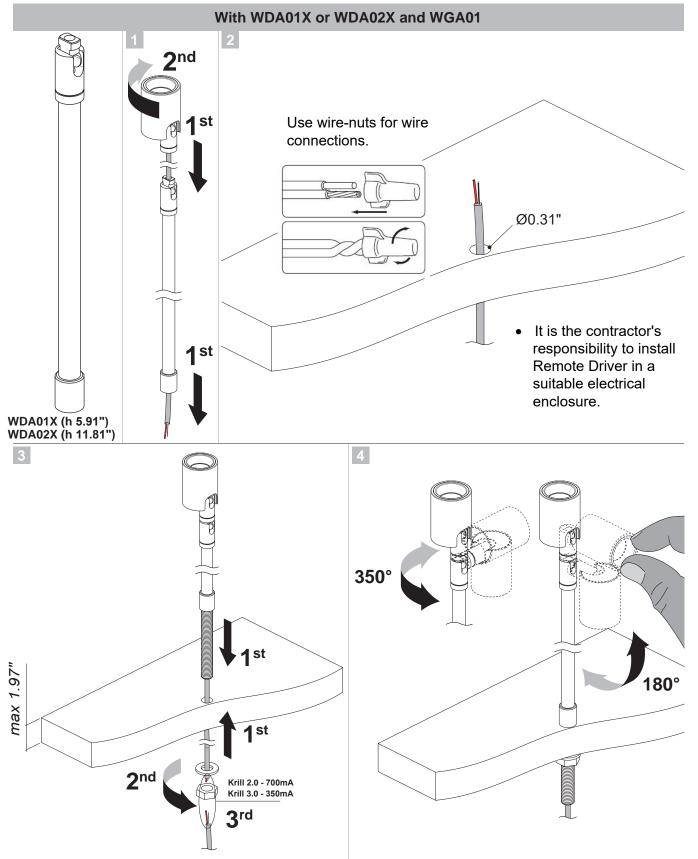

P: 908-996-7710 F: 908-996-7042 6 of 7



#### Wiring Diagram

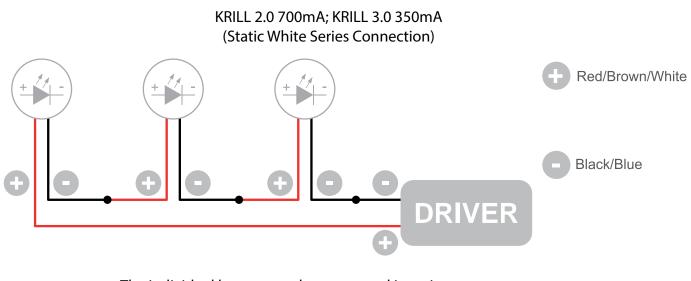

The individual lamps must be connected in series. Only power up the system once all the lamps have been connected.

- LED lights work at constant current. When choosing a power supply unit, you need to consider the current! by which the LEDs are driven and their maximum power consumption.
- Only power up the system once all the lamps are connected. Connecting an individual lamp to an active power supply may cause the lamp to break due to over-voltage.
- The electronic power supply is constant current, so to a certain extent it automatically compensates the! voltage drop associated with cable length; however, we advise not exceeding 100 feet.
- Lamps and power supply units must be installed in well-ventilated boxes or locations to allow a natural heat diffusion and avoid the devices overheating.
- On the power system, install a surge protection device to reduce the intensity of any voltage spikes, to! protect the lighting fixtures from the risk of damage.
- Fixture NOT suitable for covering with thermally insulating material.