



INSTRUCTIONS PERTAINING TO RISK OF FIRE OR INJURY TO PERSONS. READ ALL INSTRUCTIONS. IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

DANGER - RISK OF SHOCK - DISCONNECT POWER BEFORE INSTALLATION! Please read all instructions before installation.

- Keep these instructions for future reference.
- Must be installed by a qualified electrician in accordance with national and local standards. Designplan is not responsible for fixtures installed without regard to these standards.
- Unauthorized alterations or tampering of product voids warranty.
- The main power connection must be in accordance with local electrical codes.
- Suitable for OUTDOOR applications.

FLEA C

FLEA MAXI C



IP67 IK10

Electrical Connections:

- LED lights must be **connected in parallel** respecting polarities.
- **CHOOSE POWER SUPPLY ACCORDINGLY.** Please consider the voltage through which fixtures are fed as well as the max power consumption.
- **Connect power only if all the fixtures are connected.**
- This unit must be used in conjunction with a suitable fountain rated power supply.
- Use only Class 2 type electronic power supply.
- Never use switches on secondary circuit.

Maintenance

Scheduled maintenance must be carried out once a year on all lighting devices, regardless of appliance class and type of use. It must include the following operations:

- Periodically clean fixtures to remove dirt from gratings and screw heads.
- Check tightness of screws on various parts of the device.
- Check that all cable glands and cables are intact and tight. Check that the glass or plastic lens is intact, and replace it if broken or damaged.
- The internal components such as the ballast, driver, washers and screws must not show clear signs of oxidation or rust. Clear traces of rust and oxidation will indicate the presence of water inside the device.
- In the case of damage, the components must be replaced by original components or spare parts.


FLEA C, FLEA MAXI C

4W, 6.5W, Remote 24VDC, STATIC WHITE, RGBW






installation instructions

FIXTURE DIMENSION:

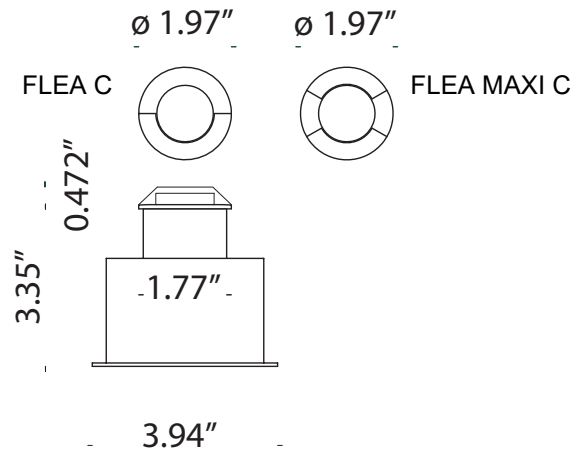

INSTALLATION

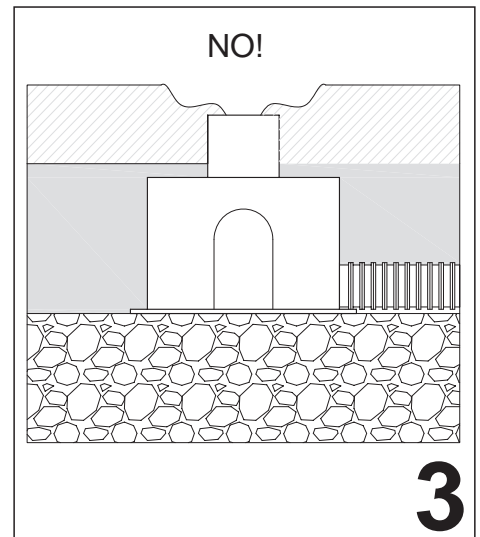
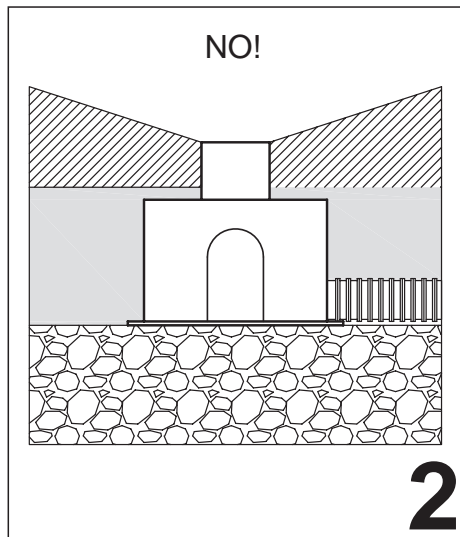
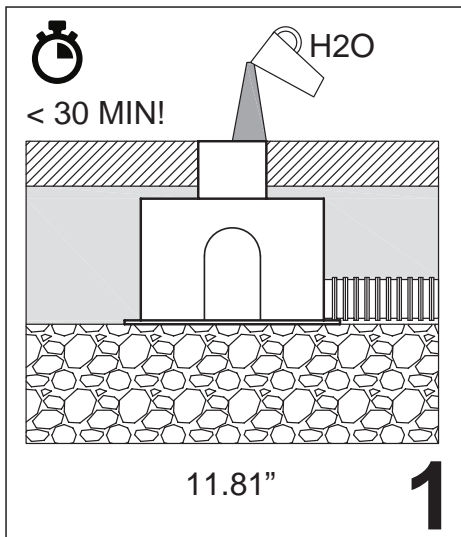


FLEA C, FLEA MAXI C


4W, 6.5W, Remote 24VDC, STATIC WHITE, RGBW

designplan 

installation instructions

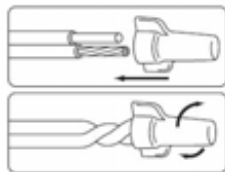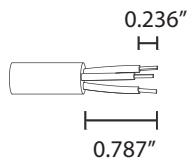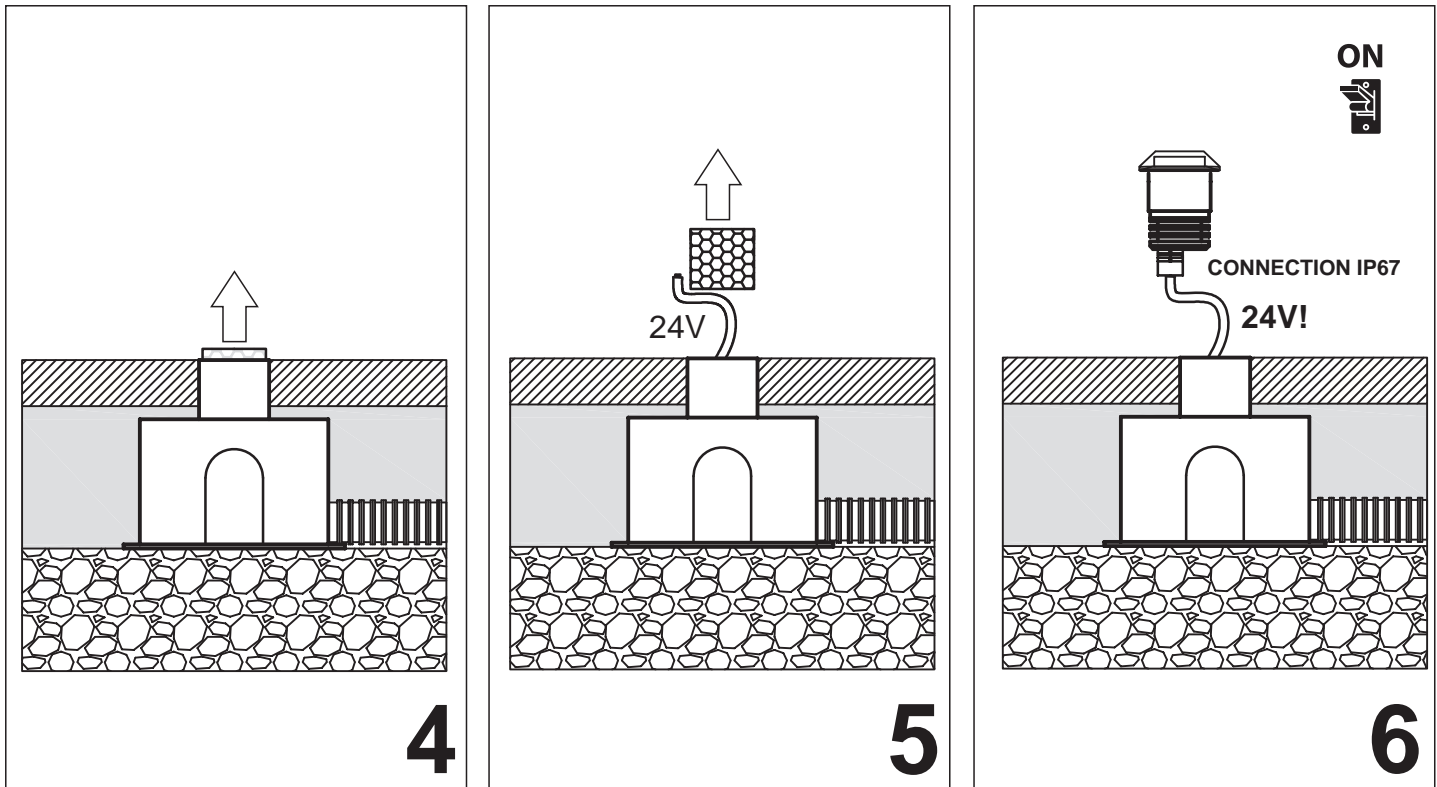


- Use gel-filled waterproof wire-nuts for wire connections.

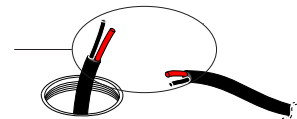

All luminaires have to undergo regular maintenance according to the following steps:

- clear periodically the luminaires to avoid dirty deposit
- check the fastening of the screws
- inspect cables and cable glands for any possible damage
- check the fastening of cable glands
- check if seals are working order
- defect or damaged must be replaced before switching the luminaire on. Use original spare parts only
- it is important to carry out luminaire maintenance at each bulb substitution or at least once per year
- any improper use installation, any tampering any unauthorized modification of the luminaire causes the immediate expiry of warranty on the luminaire and of any claim against the manufacturer
- should Francesconi allow the return of a luminaire for technical inspection or tests, they must be returned with a piece of wiring cable (20cm) connected to the luminaire and complete with the connection made by the installer

Wiring Diagram

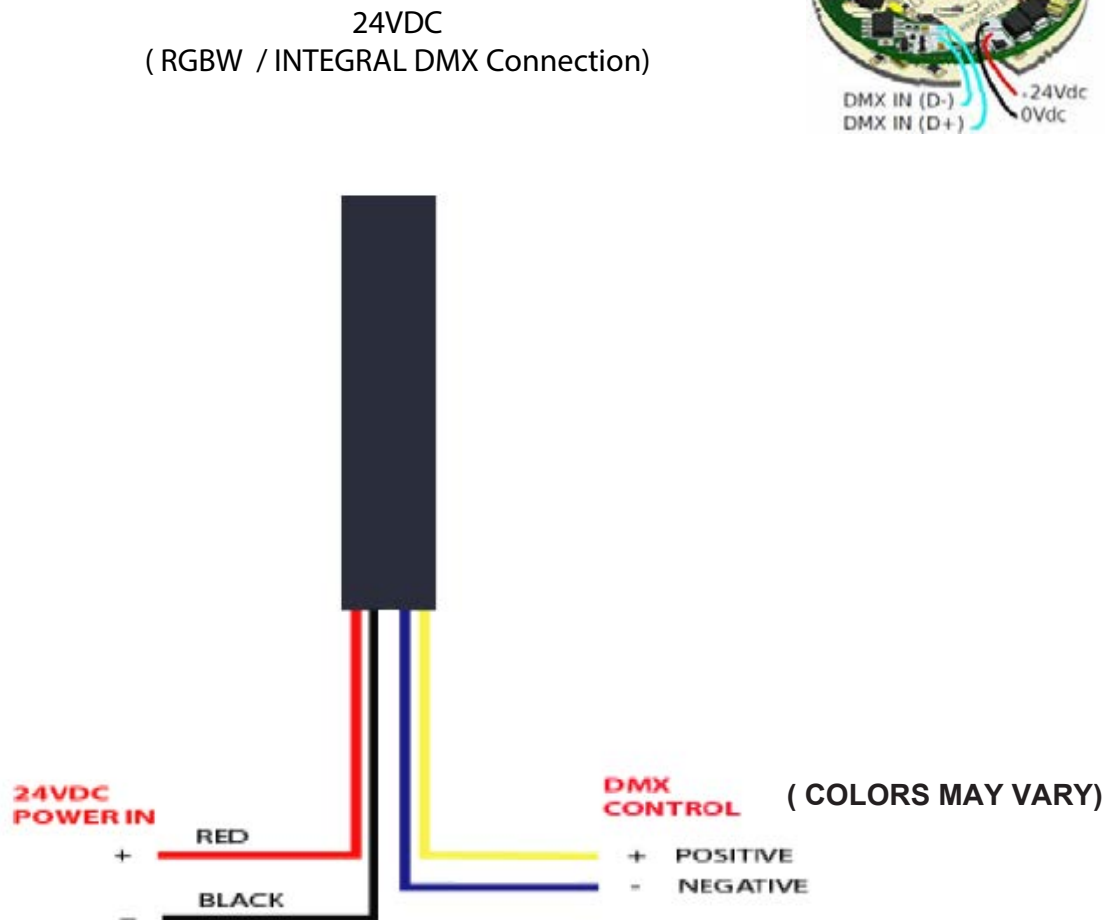

- Only power up the system once all the lamps are connected. Connecting an individual lamp to an active power supply may cause the lamp to break due to over-voltage.
- Power supply units must be installed in well-ventilated boxes or locations to allow a natural heat diffusion and avoid the devices overheating.
- On the power system, install a surge protection device to reduce the intensity of any voltage spikes to protect the lighting fixtures from the risk of damage.